



Power Mac G4 (Mirrored Drive Doors)

Updated September 13, 2002



Take Apart
Power Mac G4 (Mirrored Drive Doors)



General Information

Overview

The identifying characteristics on the front of this Power Mac G4 (Mirrored Drive Doors) computer are its top speaker and mirrored optical drive bezel. Like the Power Mac G4 (QuickSilver and QuickSilver 2002) computers, this model also has a silver-colored case.



Tools

The following tools are required:

- #2 Phillips screwdriver
- #1 Phillips screwdriver
- T-10 Torx driver or 2.5 mm Allen wrench
- Small flat-blade screwdriver
- Needlenose pliers

Note: Magnetized tools are recommended to avoid dropping screws within the computer.

Note: To organize the screws you remove from the computer, use a tray with divided compartments (such as a plastic ice cube tray).

Serial Number Location

The computer's serial number is located on the back panel.

Before Opening the Computer

Warning: The power supply in this computer is a high-voltage component and should not be opened for any reason, even when the computer is off.

Warning: After shutting down the computer, you must wait a few minutes before servicing it to allow internal components to cool.

Important: The only way to shut off power completely to the computer and display is to disconnect their power plugs from the power source. Make sure the power cords to the computer and display are within easy reach.

Electrostatic Discharge (ESD) Precautions

Follow these steps to avoid damage from ESD before working inside the computer.

1. Shut down the computer.
2. Wait a few minutes to allow the computer's internal components to cool.
3. Unplug all cables from the computer except the power cord.
4. Touch the metal PCI access covers on the back of the computer to discharge static electricity.
5. Unplug the power cord.
6. Lift the latch on the side of the computer. (If the latch will not lift, check that the security lock port and lockable cover latch in the back of the computer are not locked.)
7. Put on an ESD wrist strap.
8. To avoid static electricity building back up in your body, do not walk around the room until after you have finished working and closed the computer.

Operating the Computer

Warning: In this computer the lower fan is in direct line with the heatsink. However, when the computer is open and the side panel is set down, the fan and heatsink are no longer in contact. To avoid overheating and permanent damage, never turn on the computer unless all of its internal and external parts are in place and it is closed. Operating the computer when it is open or missing parts can damage the computer or cause injury.



Opening the Computer

Tools

No tools are required for this procedure.

Preliminary Steps

No preliminary steps are required before you begin this procedure.

Procedure

1. Lift the latch to unlock the right side access panel.



2. **Note:** Gently lower the side panel onto a clean, ESD-safe mat to avoid scratching the case. Lower the side panel until it lies flat.

Note: Release the latch before returning the side panel to its upright closed position.



Top Handles

Tools

The only tool required for this procedure is a 2.5 mm Allen wrench.

Part Location



Preliminary Steps

There are no preliminary steps for this procedure.

Procedure

1. Remove the two Allen screws that secure the handle you are replacing.



2. Lift the handle from the computer.



Replacement Note: When replacing a handle, make sure the inner prongs fit inside the raised points on the computer.

Replacement Note: When replacing a handle, make sure you orient the handle so the three tiny bumps are near the lower edge of the handle. The handle won't fit properly if it is turned upside down. The top front and top rear handles are interchangeable.





Top Panel

Tools

No tools are required for this procedure.

Part Location




Preliminary Steps

Before you begin, remove the handles from the top front and top rear of the computer.

Procedure

1. Slide the top panel toward the front of the computer to unhook the six tabs.
2. Lift the top panel from the chassis.

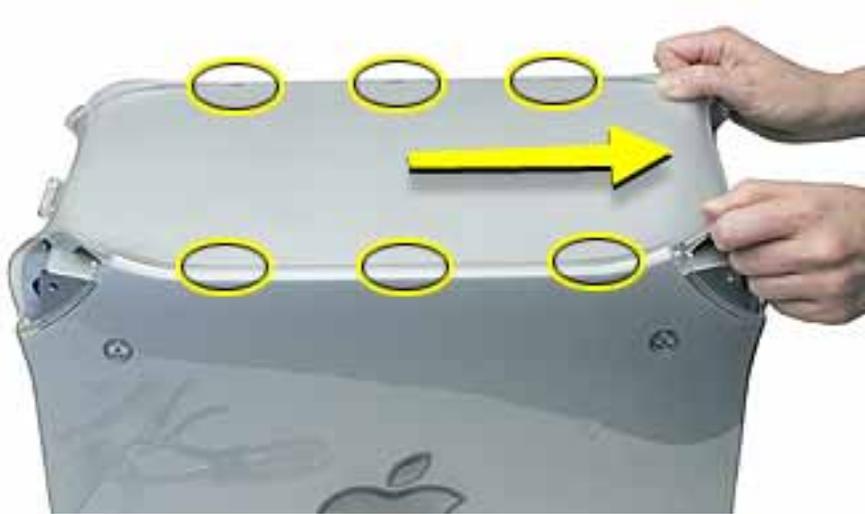



Speaker Grill

Tools

The only tool required for this procedure is a small flat-blade screwdriver.

Part Location



Preliminary Steps

There are no preliminary steps for this procedure.

Procedure

1. Insert the tip of a screwdriver into one of the openings in the speaker grill.

Warning: To prevent damage to the speaker, do not insert the screwdriver too far.

2. Pry out the speaker grill.



Replacement Note: Press the replacement speaker grill into the speaker opening.



Lower Supports

Tools

The only tool required for this procedure is a 2.5 mm Allen wrench.

Part Location



Preliminary Steps

Before you begin, place the computer upside down on an ESD mat.

Warning: When the computer is upside down or the lower supports are removed, the computer can be unstable.

Procedure

1. With the computer upside down, remove the two Allen screws securing the support to the computer.



2. Remove the support from the computer.





Lower Panel, Front

Tools

No tools are required for this procedure.

Part Location



Preliminary Steps

Before you begin, remove the lower front support.

Warning: When the computer is upside down or the lower support is removed, the computer can be unstable.

Procedure

1. Lift the lower front panel from the chassis. There are no screws holding this panel to the chassis; the front support holds it in place.
2. **Important:** Note the routing of the AirPort antenna cable. Carefully remove it from the notches in the lower front panel.





Lower Panel, Rear

Tools

No tools are required for this procedure.

Part Location



Preliminary Steps

Before you begin, remove the lower rear support.

Warning: When the computer is upside down or the lower support is removed, the computer can be unstable.

Procedure

Lift the lower rear panel from the chassis. There are no screws holding this panel to the chassis; the rear support holds it in place.





Rear Vented Panel

Tools

The following tools are required for this procedure:

- 2.5 mm Allen wrench
- Flat-blade screwdriver

Part Location



Preliminary Steps

Before you begin, remove the following:

- Lower rear support
- Lower rear panel
- Top rear handle

Warning: When the computer is upside down or the lower supports are removed, the computer can be unstable.

Procedure

1. With the computer positioned on its left side panel, remove the three Allen screws securing the rear vented panel to the computer.



2. Use a flat-blade screwdriver to pry out the tabs from the lower chassis.



3. Grasp the rear vented panel on both sides of the lockable cover latch, and forcefully pull off the rear vented panel.





Hard Drive Carrier, Back

Tools

The following tools are required for this procedure:

- Magnetized #2 Phillips screwdriver.
- Pliers

Part Location



Preliminary Steps

Before you begin, open the side access panel.

Procedure

1. Using a Phillips screwdriver, remove the screw that attaches the carrier to the chassis.

Note: On some production models, the screw is not present not required.

2. Pull the left side lever forward, and slide the carrier up to release the mounting pegs on the back of the carrier from the chassis.



3. Rotate the carrier back from the chassis far enough to reach the drive cables. Disconnect the hard drive data and power cables (P2 and P3) from the hard drive(s).


Note: You might need to use pliers to grasp and disconnect the power cable connector(s).



4. Remove the carrier and drive(s) from the computer.

Replacement Note: Connect the cables to the drives before installing the carrier.

Replacement Note: Be sure to align the mounting pegs on the back of the carrier with the notches in the chassis. Then press the carrier in and down until the pegs engage and the left side lever clicks into place.

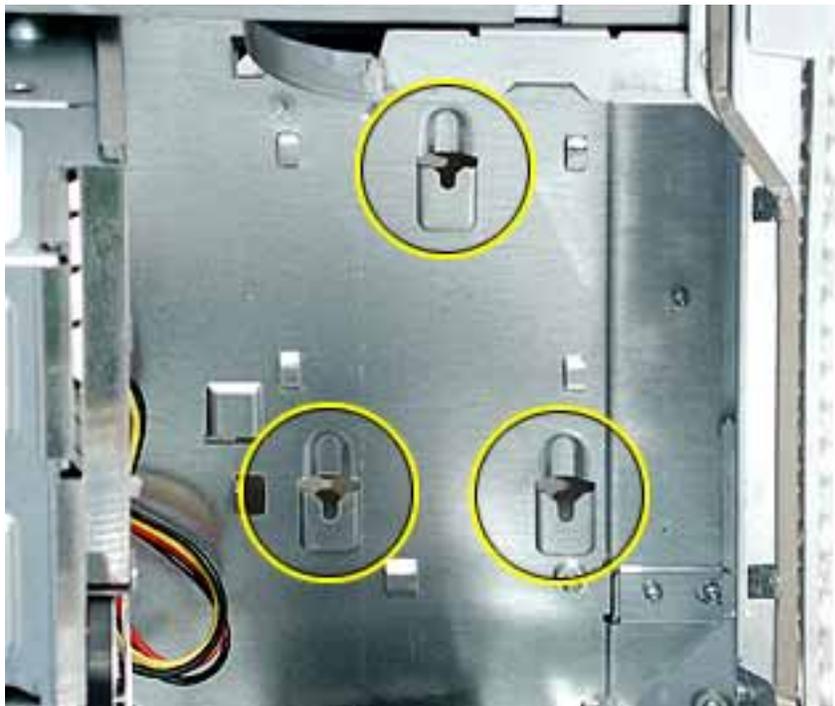



Hard Drive Carrier, Front

Tools

The only tool required for this procedure is a magnetized Phillips screwdriver.

Part Location




Preliminary Steps

Before you begin, open the side access panel.

Procedure

1. Press down on the carrier's right side lever.
2. Holding the lever down, slide the carrier forward and out of the computer.

Warning: Be careful not to scrape any cables when sliding the carrier forward.

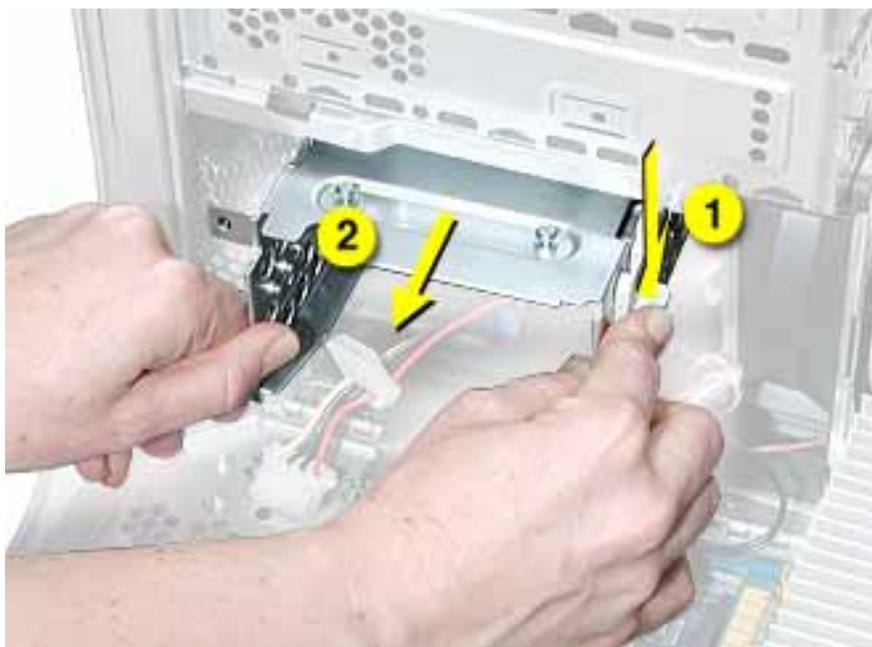

Replacement Note: Align the center mounting peg on the top of the carrier with the center channel on the underside of the optical drive shelf. This center peg helps to guide the carrier. Then align the two remaining pegs, and slide the carrier in until the pegs engage and the right side lever clicks into place.



Replacement Note: Before closing the side access panel, make sure the P4 and P5 power cable connectors are either attached to the hard drives or tucked inside the front hard drive carrier.





Hard Drive

Tools

The only tool required for this procedure is a Phillips screwdriver.


Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the hard drive carrier.

Procedure

1. Remove the four mounting screws from the sides of the drive carrier.
2. Slide the drive forward out the front of the drive carrier.

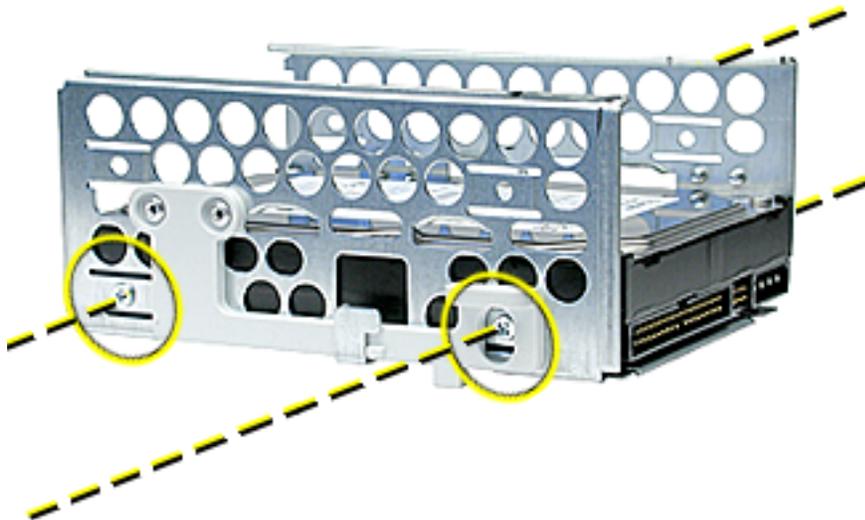



ATA 100 Hard Drive Cable

Tools

No tools are required for this procedure.

Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the back hard drive carrier.

Procedure

1. Open the cable clamp at the bottom of the chassis.
2. Disconnect the ATA 100 cable from the connector at J34 on the logic board.





Optical Drive

Tools

The only tool required for this procedure is a Phillips screwdriver.

Part Location



Preliminary Steps

Before you begin, open the side access panel.

Procedure

1. Loosen the captive screw near the front panel board.
2. Remove the lower screw that secures the optical drive carrier to the chassis.




3. Slide the back panel off the carrier.



- Slide the carrier back and rotate it so that you can reach the drive cables.
- Disconnect the drive data and power cables (P6 and P7) from the back of the optical drive(s) and remove the carrier from the computer.



- Remove the four mounting screws from the sides of the drive carrier.
- Slide the drive forward out the front of the drive carrier.

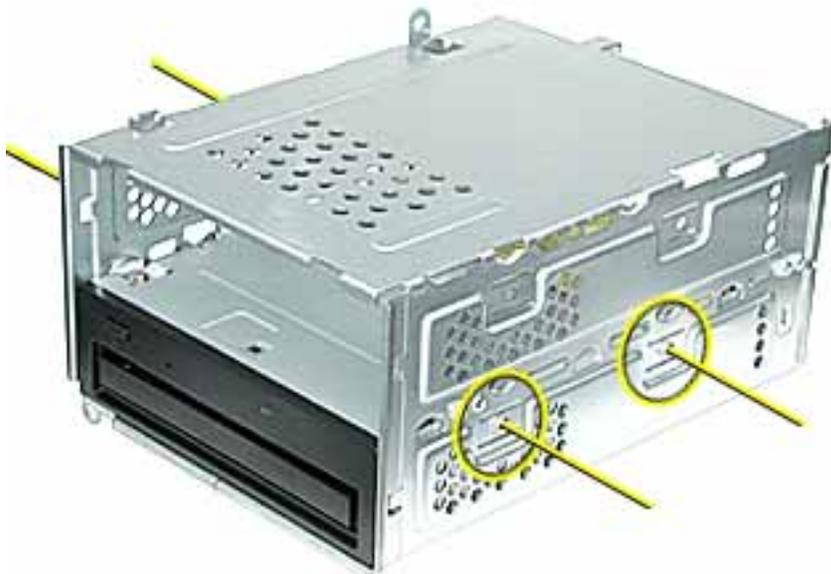

Replacement Note: Before sliding the carrier back onto the optical drive shelf, make sure the power cable bundle at the side panel is routed in the recessed channel.



Replacement Note: When sliding the carrier back onto the optical drive shelf, make sure the latch on the underside of the carrier engages with the notch in the drive shelf.



Replacement Note: Before sliding the rear panel back onto the carrier, make sure the top lip of the panel engages with the top edge of the drive carrier.

Warning: Be careful not to pinch the power cable between the panel and the carrier.





Optical Drive Cable

Tools

No tools are required for this procedure.


Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the front hard drive carrier.
- Remove the optical drive carrier.

Procedure

1. Peel up the optical drive cable from the double-sided tape on the optical drive shelf.

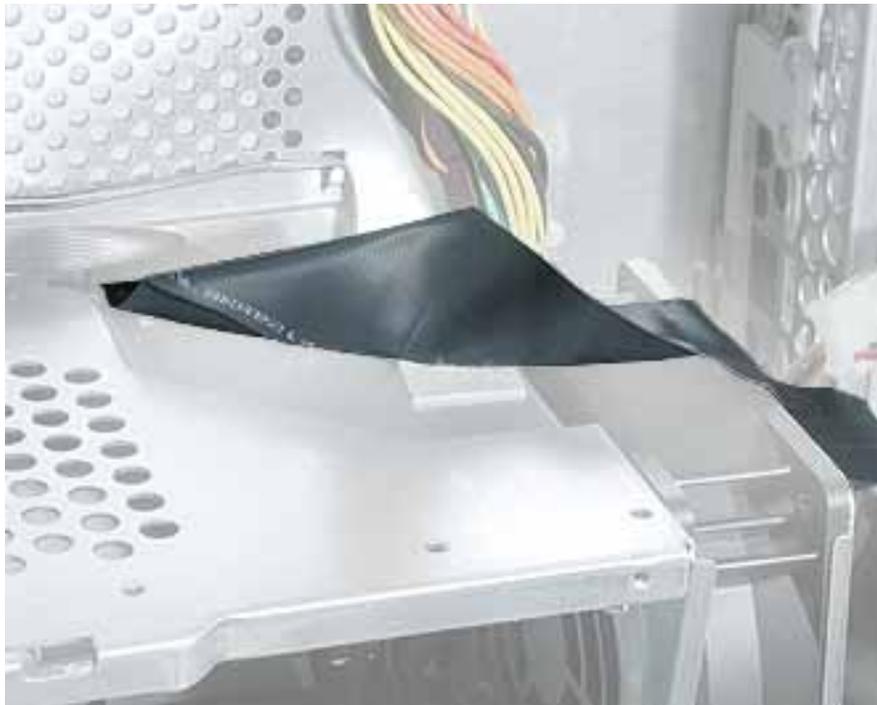

2. Open the two cable clamps at the bottom of the chassis.



3. Disconnect the cable from the logic board and free the cable from the opening in the optical drive shelf.





Lower Fan

Tools

The only tool required for this procedure is a small flat-blade screwdriver.

Part Location




Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the optical drive carrier.


Procedure

1. Disconnect the ribbon cable from the logic board and fold it back to expose the lower fan cable connector.

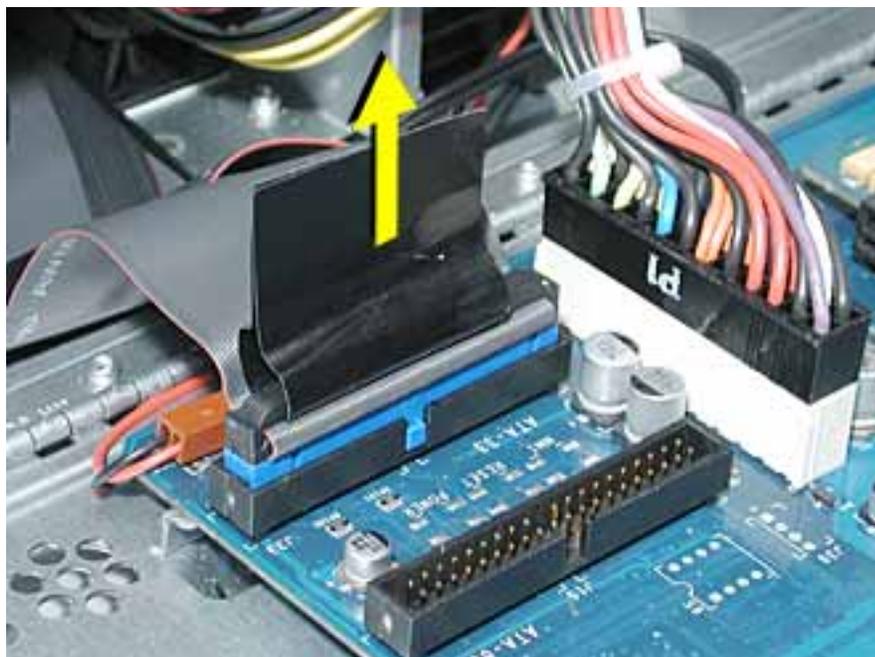

2. Using a small flat-blade screwdriver, gently lift up the locking tab on the lower fan cable and disconnect the cable from the logic board.


Replacement Note: Route the fan cable under the ribbon cable and over the narrower flex cable, as shown.

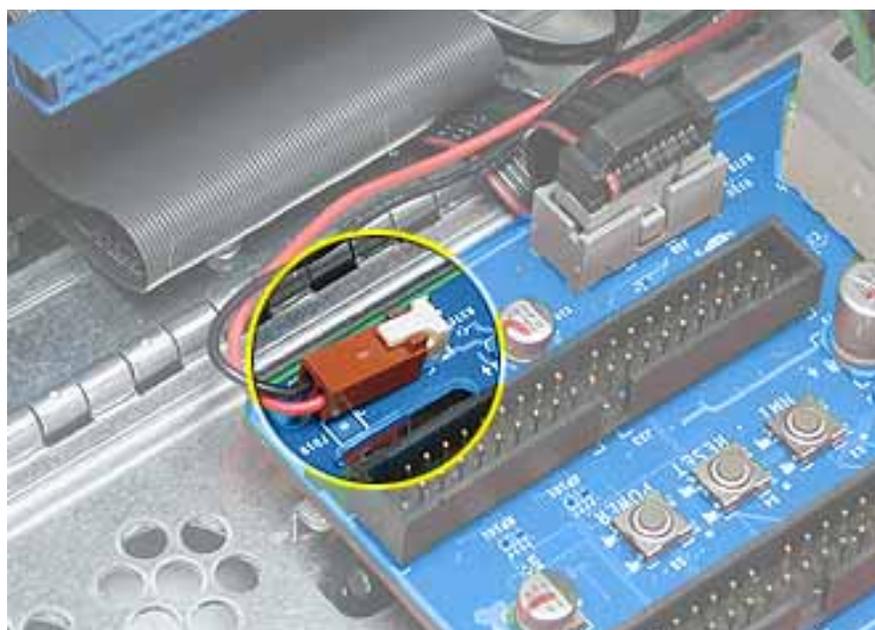

- Slide the fan straight up to disconnect it from the optical drive shelf, and remove the fan from the computer.



Replacement Note: Align the fan with the three latches in the drive shelf and slide straight down until you feel the fan lock into place.

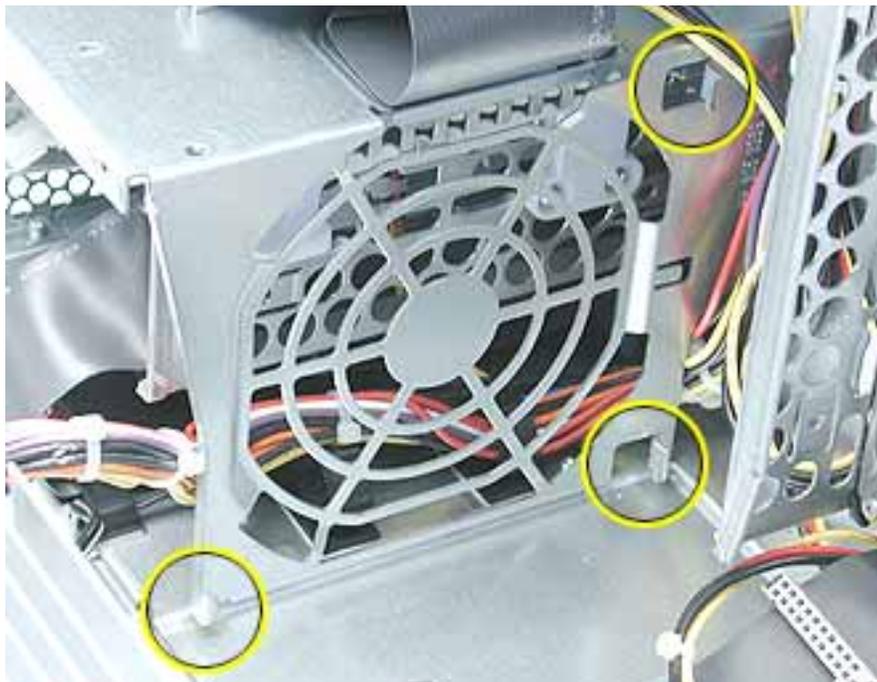



Left Side Panel

Tools

The following tools are required for this procedure:

- 2.5 mm Allen wrench
- Needlenose pliers

Part Location



Preliminary Steps

Before you begin, open the computer and remove the optical drive carrier.

Procedure

1. Remove the four 2.5 mm Allen screws on the side panel.



2. Using a needlenose pliers, squeeze the tabs (located beside the power supply cable bundle) to release the left side panel from the metal chassis.
3. Lift the left side panel from the chassis.





Front Panel

Tools

No tools are required for this procedure.

Part Location




Before you begin, open the computer and remove the following.

- Handle at the top front of the computer
- Support at the lower front of the computer
- Speaker grill (if present)
- Optical drive carrier

Warning: When the lower support is removed, the computer can be unstable.

Procedure

1. Open the side access panel. Locate the four front panel tabs.
2. Carefully push the front panel tabs inward to release them from the chassis.

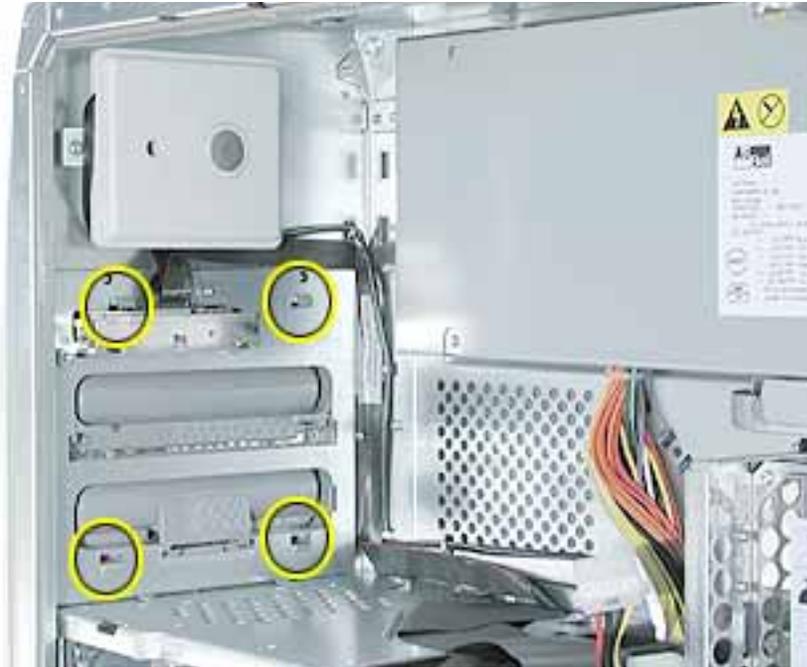

3. Pull the front panel off the chassis.
4. Press inward on the four tabs to remove the optical drive bezel from the front panel.





Power Supply

Tools

The following tools are required for this procedure:

- #2 Phillips screwdriver
- T-10 Torx driver

Part Location



Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the optical drive carrier.
- Remove the lower fan.

Procedure

Warning: The power supply in this computer is a high-voltage component and should not be opened for any reason, even when the computer is off.

1. Use a T-10 Torx driver to remove the power supply screw from the back panel.



2. Remove the Phillips screw from the side panel.



3. Disconnect the power supply cables from all drives and from the logic board.
4. Release the power cable harness from the guides and route the harness out through the opening in the optical drive shelf.



5. Slide the power supply forward and remove the power supply and cable harness from the computer.



Replacement Note: When rerouting the cable harness, make sure

- connectors P4 and P5 are routed inside the front drive carrier
- connectors P2 and P3 are routed so they can reach drives in the back drive carrier





Speaker

Tools

The following tools are required for this procedure:

- #2 Phillips screwdriver.
- Small flat-blade screwdriver

Part Location




Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the optical drive carrier.

Procedure

1. Using a small flat-blade screwdriver, lift up the locking tab on the speaker cable connector and disconnect the cable from the logic board.
2. Remove the cable from the cable guide.

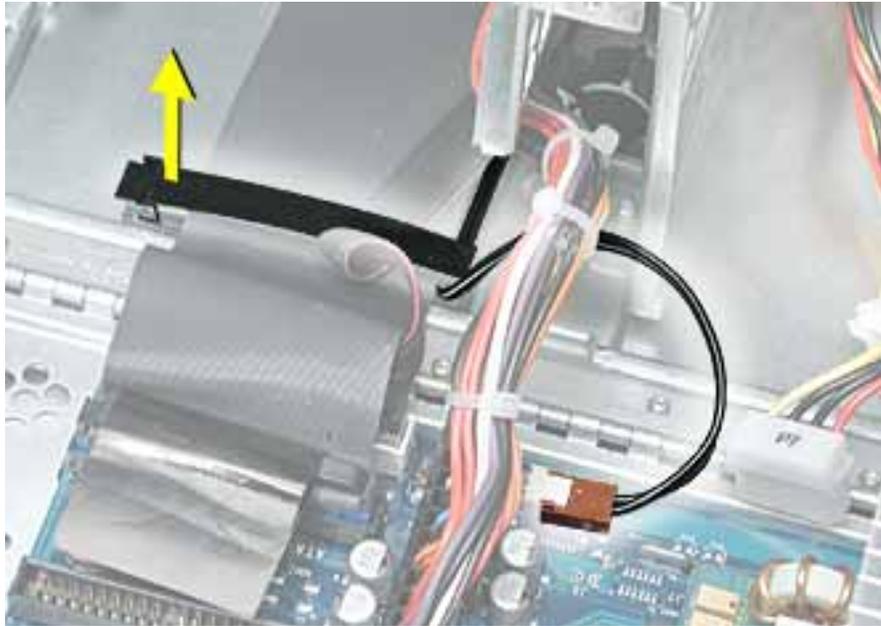

3. Route the cable up and out through the opening in the optical drive shelf and out from under the speaker case.



4. Remove the speaker mounting screw.



5. Swing the speaker away from the chassis. Press in on the two latches on the right side of the speaker and release the speaker from the chassis.



6. Remove the speaker and cable from the computer.

Replacement Note: With the replacement speaker attached to the chassis, make sure to route the speaker cable through the chassis guides, as shown.





Optical Drive Bezel

Tools

No tools are required for this procedure.

Part Location




Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the optical drive carrier.

Procedure

1. Press in and release the top two latches on the inside of the optical drive bezel.
2. Press in and release the bottom two latches.

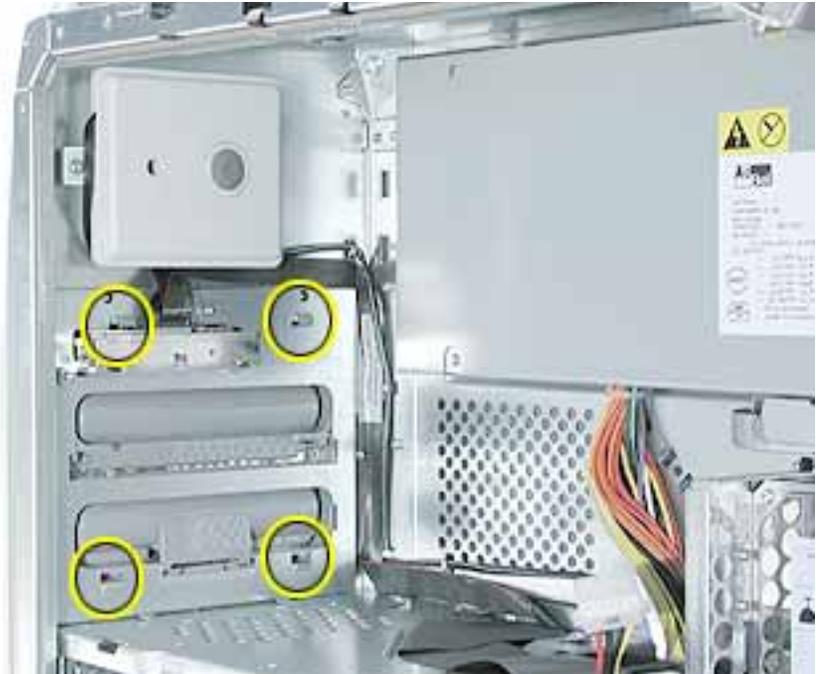

3. Remove the bezel from the computer.





Front Panel Board

Tools

The following tools are required for this procedure:

- #2 Phillips screwdriver
- Small flat-blade screwdriver
- Needlenose pliers

Part Location



Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the optical drive carrier.
- Remove the optical drive bezel.

Procedure

1. Disconnect the front panel board cable from the front panel board.
2. Using a small flat-blade screwdriver, pry up the two black plastic pegs and then the two black plastic peg holders from the top of the front panel board.



3. Using a #2 Phillips screwdriver, remove the front panel board mounting screw.



4. Remove the front panel board through the front opening in the computer.

Replacement Note: When replacing the black plastic peg holders, use needlenose pliers to compress the holders so they will fit into the holes in the top of the front panel board.





Front Panel Board Cable

Tools

No tools are required for this procedure.

Part Location



Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the front hard drive carrier.
- Remove the optical drive carrier.
- Loosen the speaker cable.

Procedure

1. Disconnect the front panel board cable from the front panel board.



2. Peel the front panel board cable from the recessed channel in the side chassis and route the cable through the opening in the optical drive shelf.



3. Open the two cable clamps at the bottom of the chassis and disconnect the front panel board connector from the logic board.





Optical Fan

Tools

The following tools are required for this procedure:

- #2 Phillips screwdriver
- Small flat-blade screwdriver

Part Location




Preliminary Steps

Before you begin, open the side access panel.

Procedure

1. Using a small flat-blade screwdriver, gently lift up the locking tab on the optical fan cable and disconnect the cable from the logic board.
2. Remove the two Phillips screws from the fan baffle.

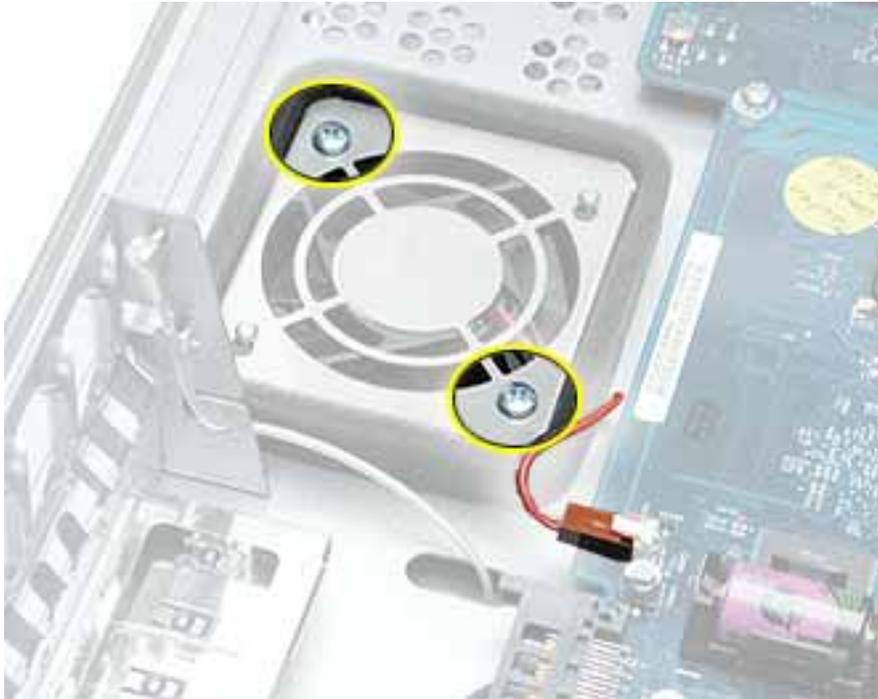

- Slide the fan baffle forward to clear the two pegs, and lift the fan baffle off of the fan.



- Pull the fan straight up to remove it from the two pegs. Route the fan cable under the surrounding foam wall.



Replacement Note: If the foam wall is damaged, replace it by peeling off the old foam and cleaning the chassis surface with an alcohol wipe. Then apply the new foam wall to the chassis.




DIMMs

Tools

No tools are required for this procedure.

Part Location

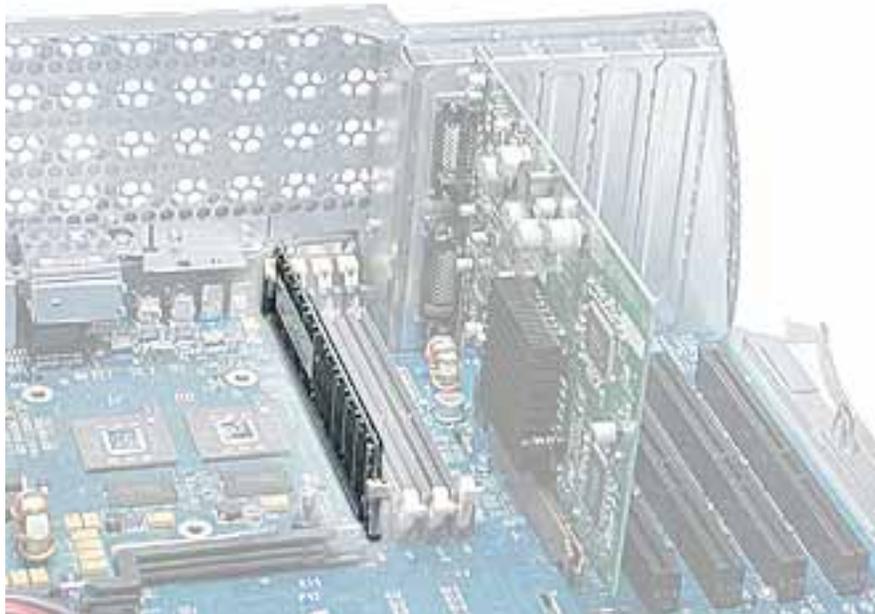

Preliminary Steps


Before you begin, do the following:

- Open the side access panel.
- Remove the heatsink if the DIMM is in the slot nearest the heatsink.

Procedure

1. Push down the ejectors on the DIMM slot.
2. Holding the DIMM by both top corners, lift it straight up out of the server.

Warning: When removing or installing the DIMM, handle it only by the edges. Do not touch its connectors. Lift the DIMM straight up from the connector to remove it, and insert it straight down into the connector to install it. Do not rock the DIMM from side to side.

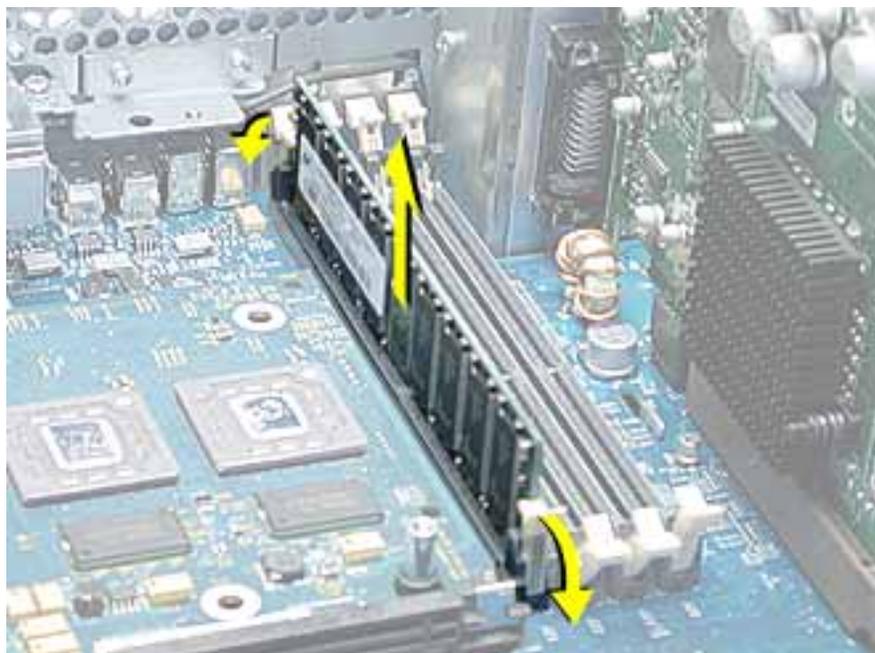

Replacement Note: The DIMM is designed to fit into the slot only one way. Be sure to align the notch in the DIMM with the small rib inside the slot.




Modem

Tools

The only tool required for this procedure is a Phillips screwdriver.

Part Location

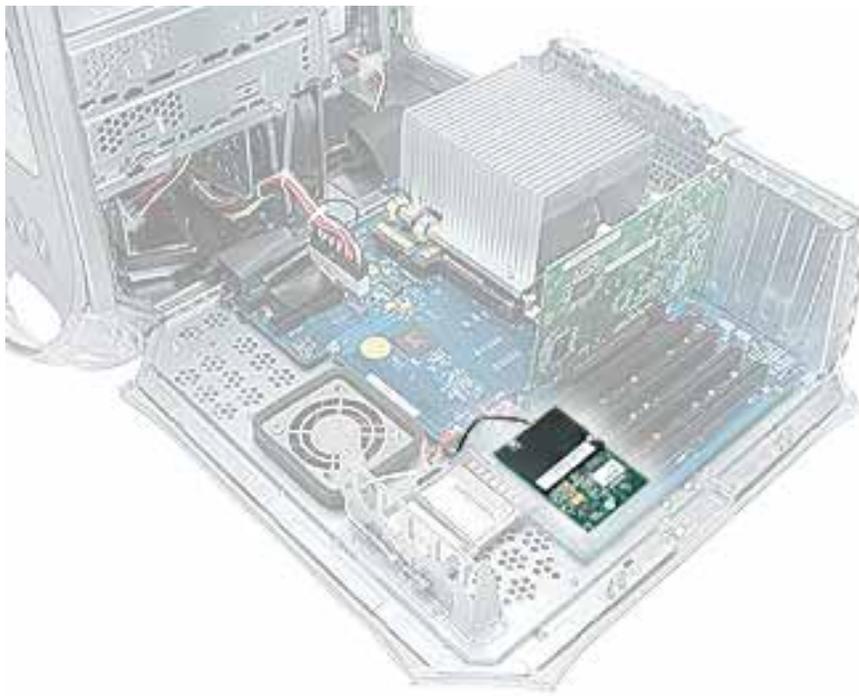

Preliminary Steps

Before you begin, open the side access panel.

Procedure

1. Using a Phillips screwdriver, remove the modem's two mounting screws.
2. Lift the modem straight up a short distance to disconnect it from the logic board.
3. Disconnect the modem cable from the modem.
4. Remove the modem from the computer.





AirPort Card

Tools

No tools are required for this procedure.

Part Location



Preliminary Steps


Before you begin, open the side access panel.

Procedure

1. Detach the coaxial antenna wire from the port on the end of the AirPort Card.



2. Pull the clear plastic tab on the AirPort Card to disconnect the card from the connector on the logic board.

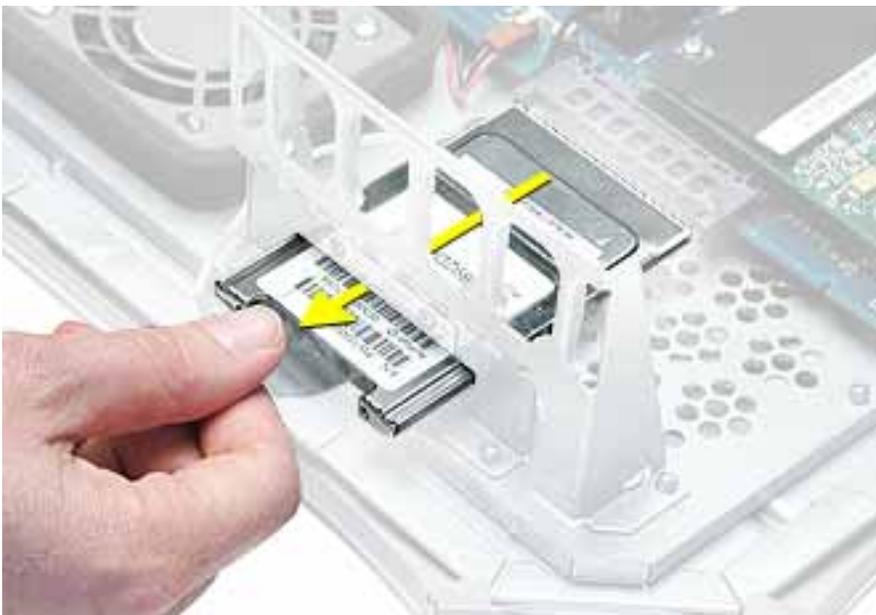

Note: If you are not replacing the AirPort Card, stow the antenna wire on the side of the PCI card guide, being careful not to bend or crimp the wire tightly.





Video Card

Tools

The only tool required for this procedure is a Phillips screwdriver.

Part Location



Preliminary Steps


Before you begin, open the side access panel.

Procedure

1. Using a Phillips screwdriver, remove the video card mounting screw.



2. Gently hold back the clip on the video card connector to release the card.
3. Pull the card straight up, and remove it from the computer.

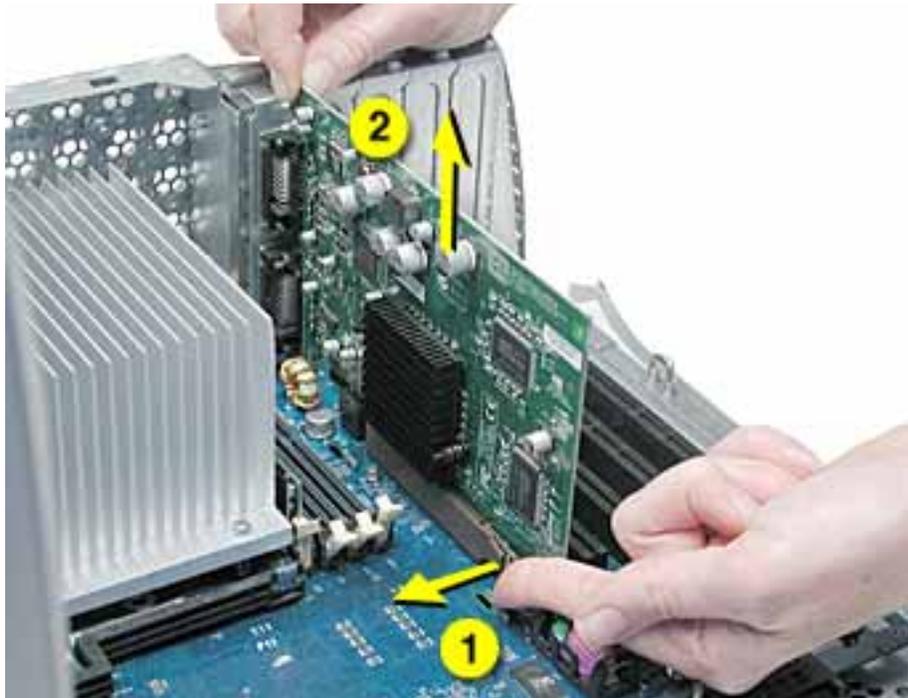

Replacement Note: Install an AGP card in slot 1 only. Install PCI cards in the slots labeled PCI 2, 3, 4, and 5.

Warning: Cables with large connectors may interfere with the enclosure in the PCI slot numbered 5, making it difficult to close the door and potentially causing damage to the PCI card. If this is the case, rearrange the cards in the slots. You may also connect the cable after the enclosure door is shut, but be sure to remove the cable before opening the door again. If the PCI cards are connected to each other with cables or jumpers, take care when closing the door.



SCSI Card

Tools

The only tool required for this procedure is a Phillips screwdriver.

Part Location




Preliminary Steps


Before you begin, open the side access panel.

Procedure


1. Disconnect the SCSI cable from the SCSI card.

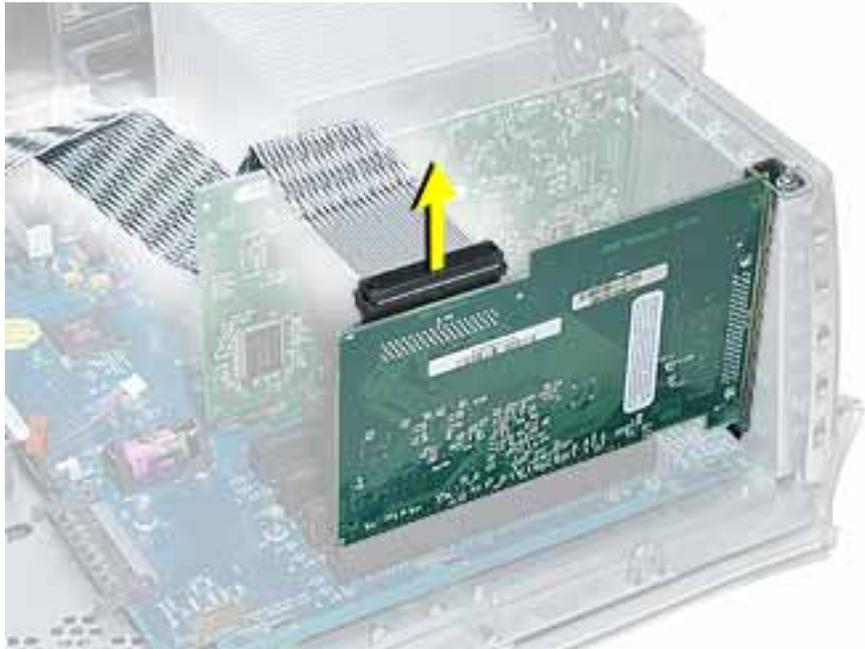

2. Remove the SCSI card mounting screw.

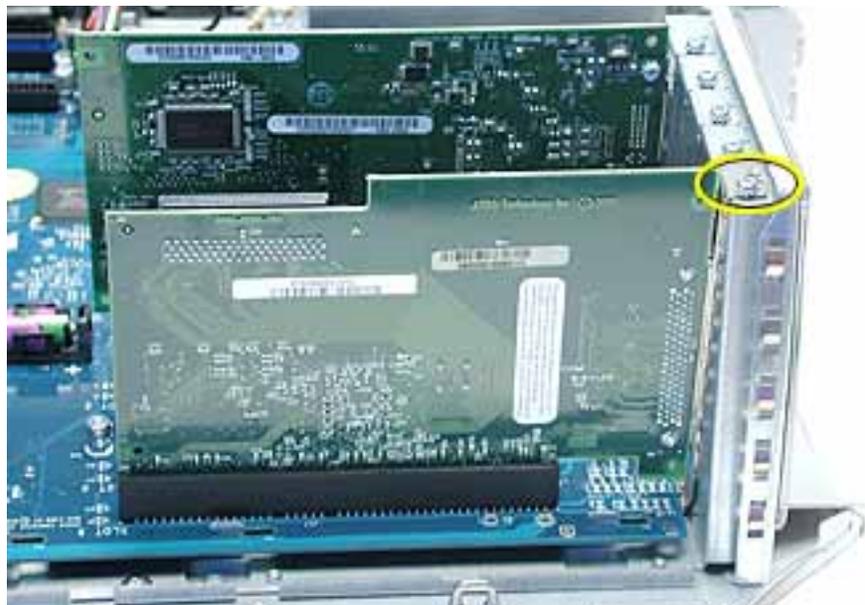

3. Lift up the SCSI card from the slot on the logic board.

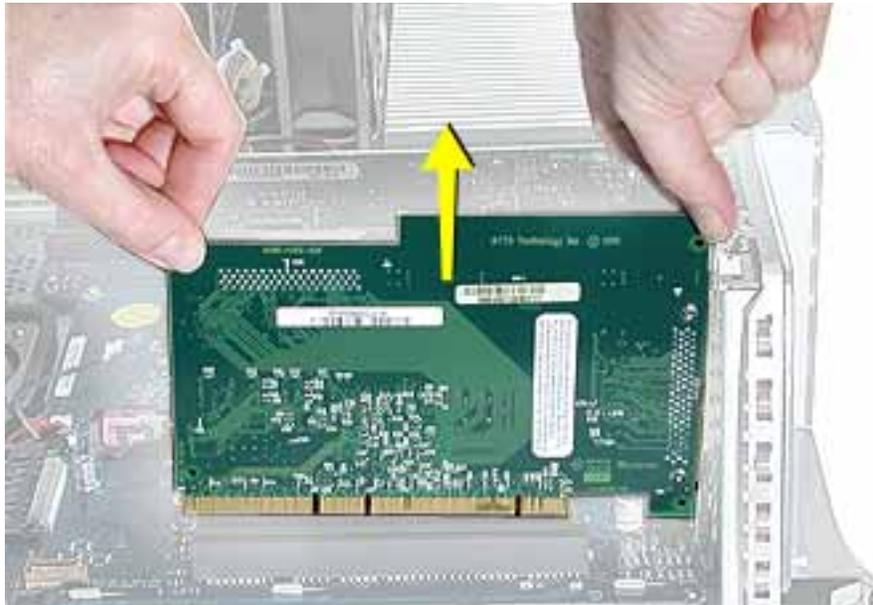



SCSI Cable

Tools

The only tool required for this procedure is a Phillips screwdriver.

Part Location



Preliminary Steps

Before you begin, open the side access panel.

Procedure

1. Disconnect the SCSI cable from the SCSI card.



2. Disconnect the SCSI cable from the hard drives at the front and back hard drive carriers.
3. Disconnect the SCSI cable from the SCSI terminator at the bottom of the chassis.





Battery

Tools

No tools are required for this procedure.

Part Location



Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the video card if a full-length video card extends over the battery.

Procedure

1. Note the orientation of the battery's positive (+) end.
2. Remove the battery from its holder.

Note: You may first need to spread the two tabs on the holder slightly apart to release the battery.



Note: When replacing the battery, make sure the positive (+) end of the battery aligns with the + symbol on the battery holder.




Heatsink

Tools

The following tools are required for this procedure:

- #1 Phillips screwdriver
- #2 Phillips screwdriver

Part Location

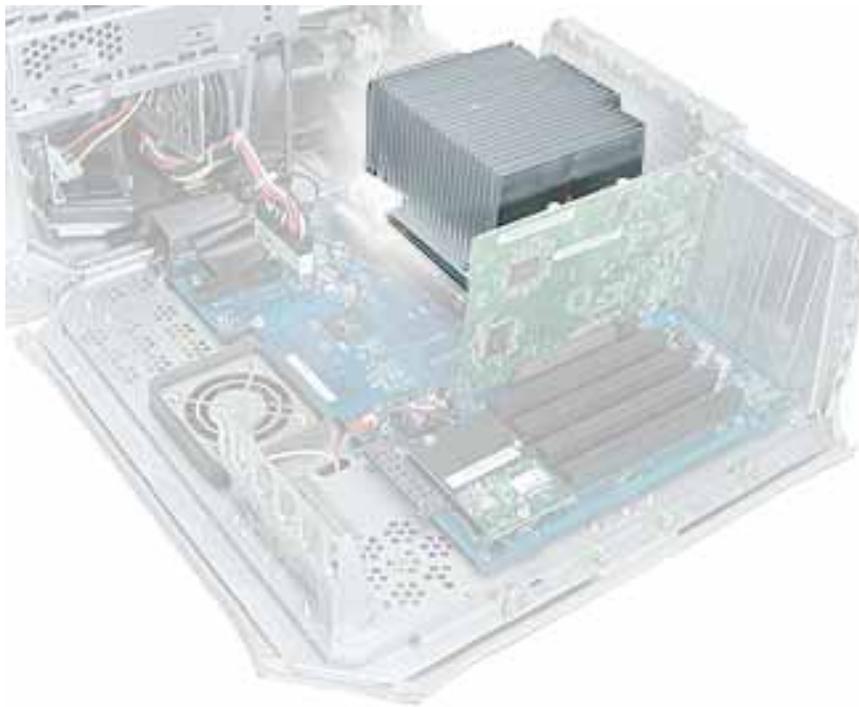


Preliminary Steps

Before you begin, open the side access panel.

Procedure

1. Remove the five heatsink mounting screws:
 - small #1 Phillips screw at back panel shield
 - medium #2 Phillips screws at heatsink bracket
 - three large #2 Phillips screws at remaining corners of heatsink

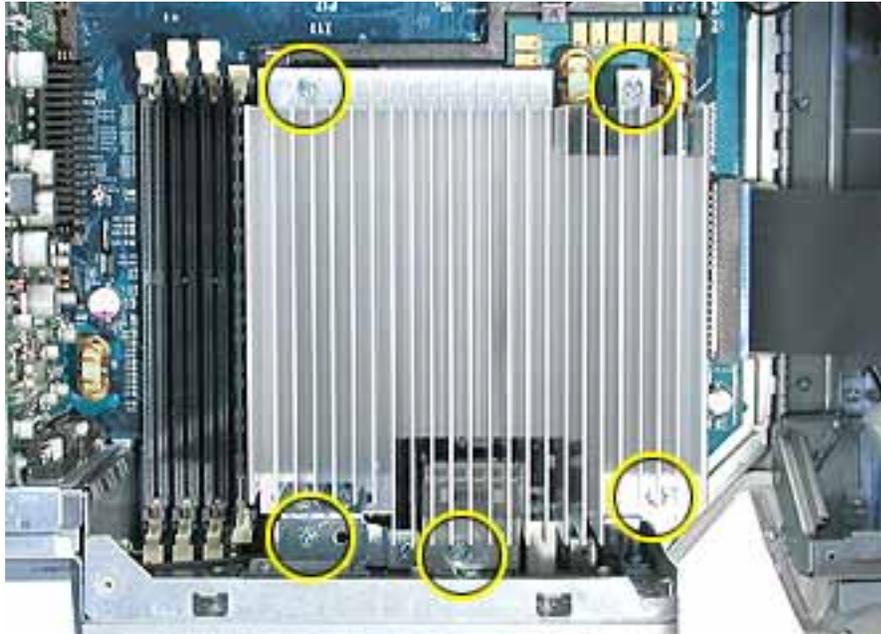

2. Lift the heatsink straight up and remove it from the computer.



Note: Whenever you remove the heatsink, you must clean the heatsink base and add new thermal grease to the chips on the processor, as follows:

- Apply a 3-mm round dot of thermal glue on the center of both chips.
- Use an alcohol pad to gently clean and dry the underside of the heatsink.
- Ensure the heatsink is level as you CAREFULLY place it on the processor.
- Install the five screws, loosely tightening each half way before fully tightening each screw.





Processor

Tools

No tools are required for this procedure.

Part Location




Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the heatsink.

Procedure

1. Grasp the processor by the edges and lift slightly to disconnect it from the logic board.
2. Slide the processor toward the back panel and then lift the processor up and out of the computer, being careful to clear the two mounting pegs.

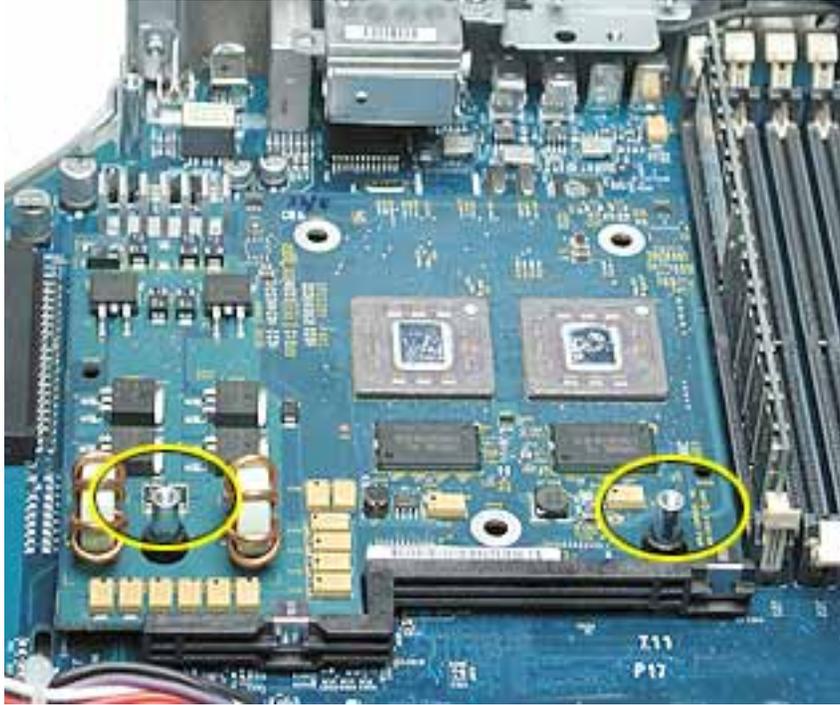



Processor Stiffener

Tools

No tools are required for this procedure.

Part Location




Preliminary Steps

Before you begin, do the following:

- Open the side access panel.
- Remove the heatsink.
- Remove the processor.

Procedure

1. Lift the processor stiffener straight up off the two mounting pegs.
2. Remove the stiffener from the computer.

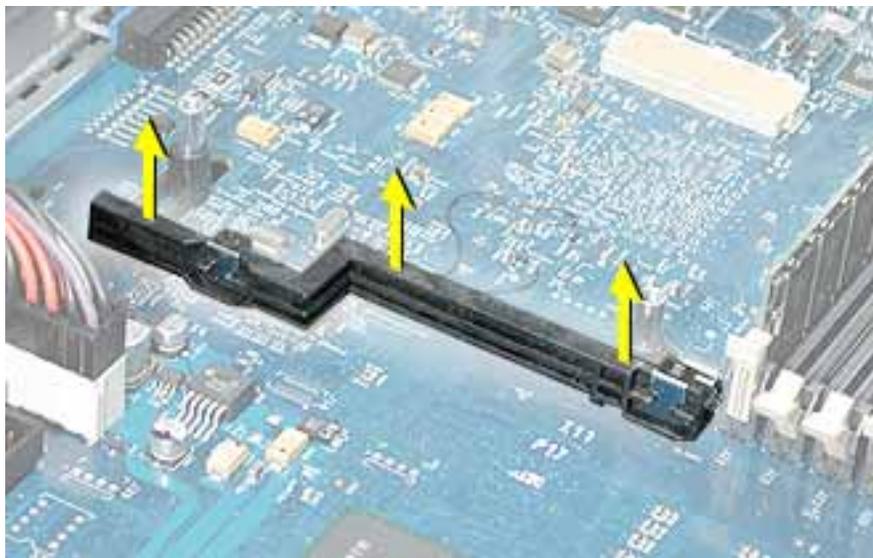



Logic Board

Tools

The only tool required for this procedure is a Phillips screwdriver.

Part Location



Preliminary Steps

Before you begin, open the computer and remove the following.

- DIMMs
- Video card
- SCSI card (if present)
- Modem (if present)
- AirPort Card (if present)
- Heatsink
- Processor

- Processor stiffener

Note: The replacement logic board does not include the heatsink, processor, processor stiffener, memory DIMMs, modem, Airport Card, or PCI/AGP cards. You must transfer these modules from the original board to the new one.


Procedure

1. Disconnect all cables to the logic board
2. Remove the logic board mounting screw.




3. Slide the logic board toward the front of the computer to clear the chassis hooks.
4. Lift up the end of the logic board nearest the front of the computer and remove the logic board.

Note: Be careful that the logic board ports clear the openings in the back panel.

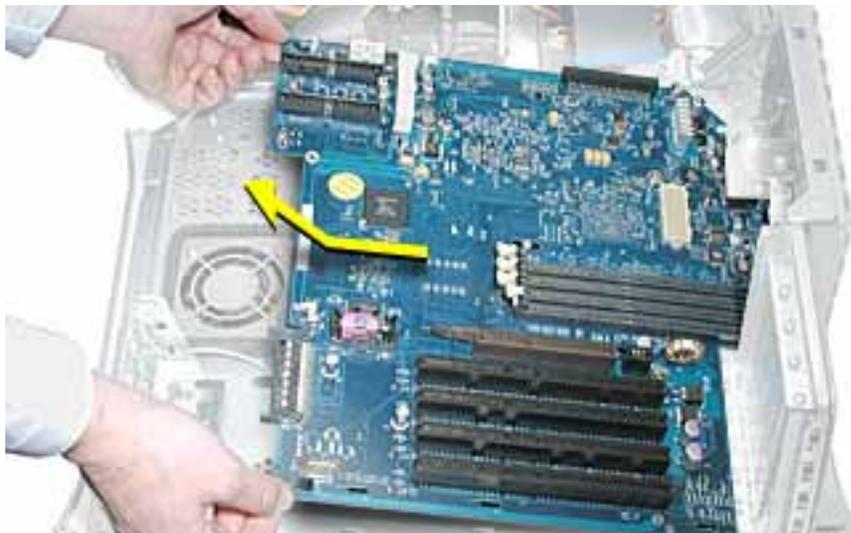

Note: After installing a replacement logic board, be sure to transfer the processor stiffener, processor, heatsink, DIMMs, and any other cards to the new board. You must also remove the battery insulator tab from the battery holder on the new board.

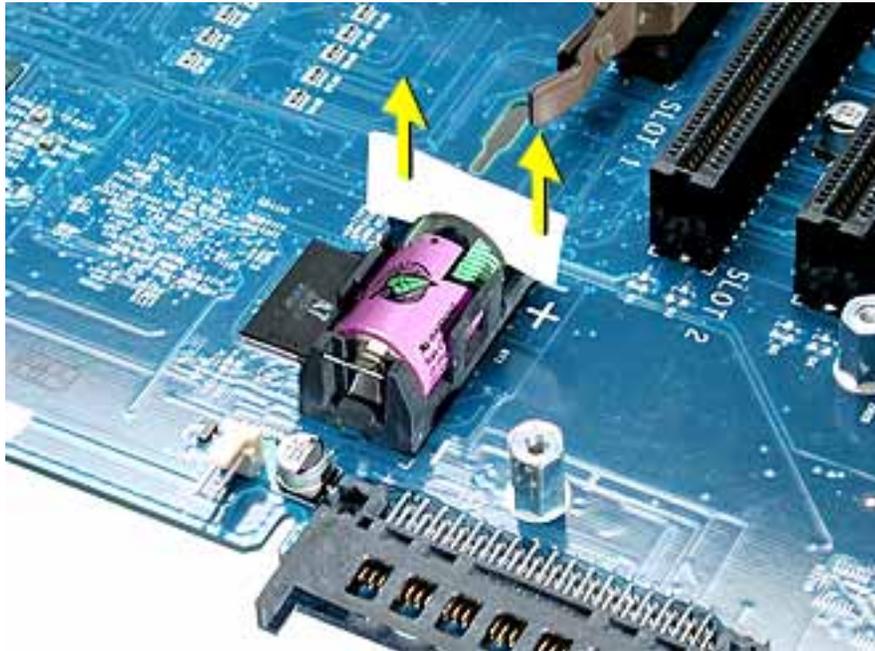



I/O Panel

Tools

The following tools are required for this procedure:

- 2.5 mm Allen wrench
- Phillips screwdriver
- Flat-blade screwdriver

Part Location



Preliminary Steps

Before you begin, open the computer and remove the following:

- DIMMs
- SCSI card (if present)
- Video card
- Modem (if present)

- AirPort Card (if present)
- Heatsink
- Processor
- Processor stiffener
- Logic board

Procedure


1. Remove the two Allen screws from the I/O panel.




2. Remove the Phillips screw securing the access cover to the rear chassis. Remove the access cover.



3. Use a flat-blade screwdriver to pry up the hooked tabs from the slots in the chassis. Pull that end of the I/O panel forward.

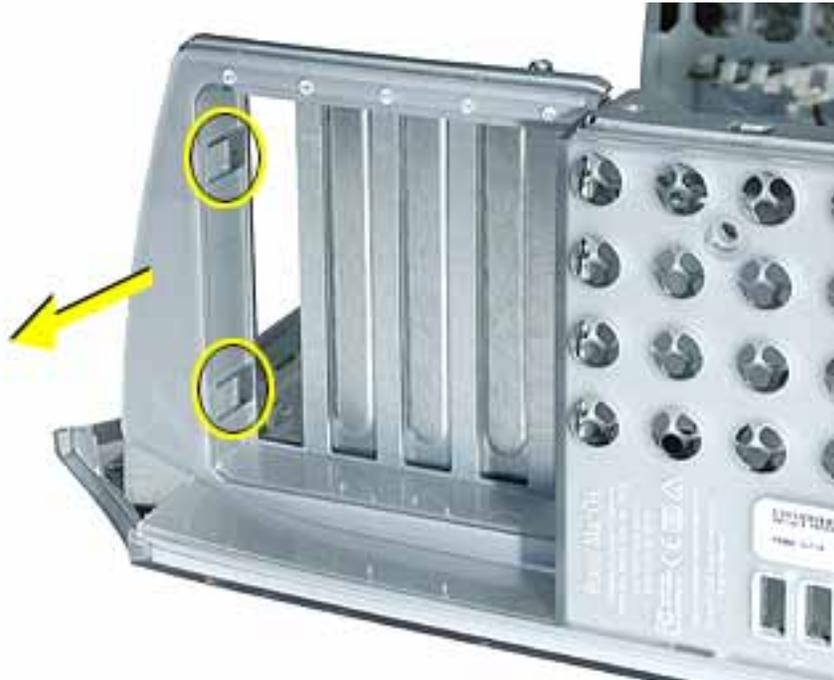


4. From inside the chassis, pry up the two tabs near the modem filter board.

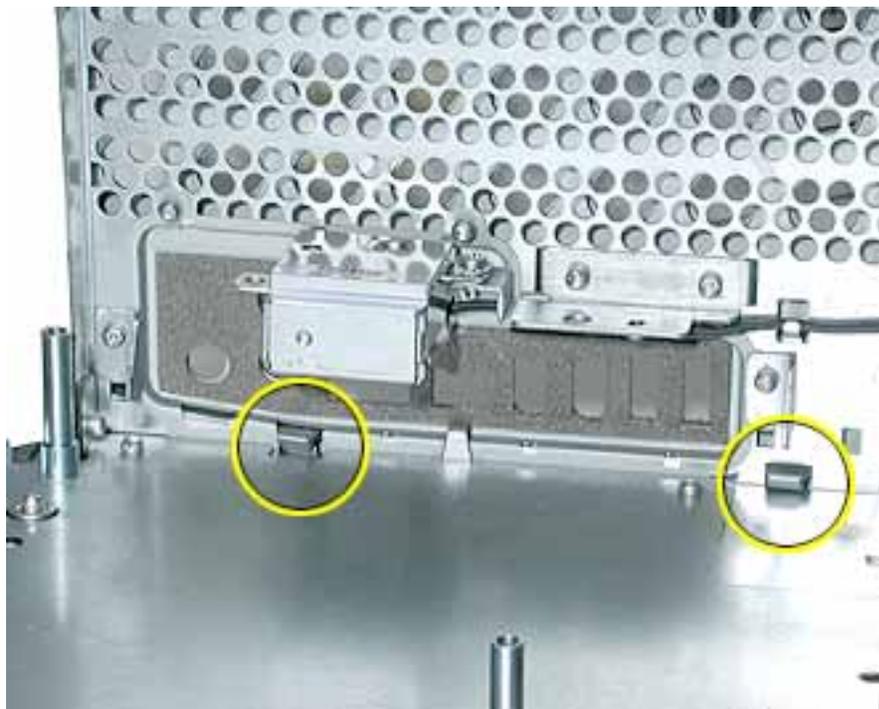

-
5. Remove the I/O panel from the chassis.

Replacement Note: Before installing the replacement I/O panel, insert the I/O port liner into the panel.

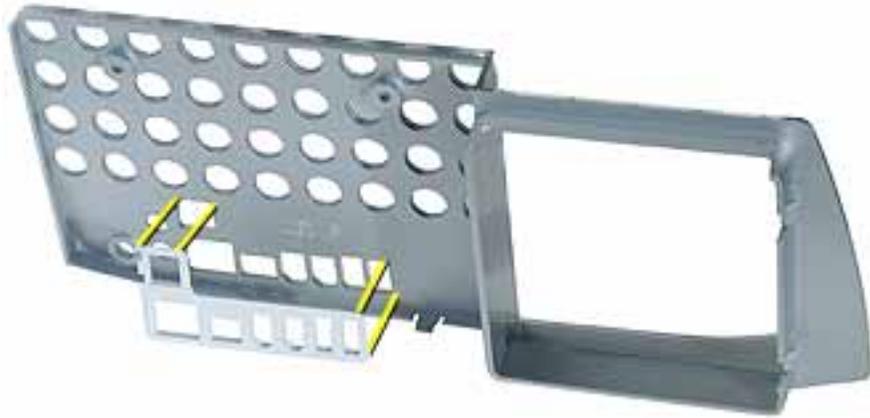



Right Side Access Panel

Tools

The following tools are required for this procedure:

- 2.5 mm Allen wrench
- Phillips screwdriver
- Needlenose pliers

Part Location



Preliminary Steps

Before you begin, open the computer and remove the following:

- DIMMs
- SCSI card (if present)
- Video card
- Modem (if present)

- AirPort Card (if present)
- Heatsink
- Processor
- Processor stiffener
- Logic board

Procedure


1. Remove the four 2.5 mm Allen screws on the side panel.



2. Open the side access panel.
3. Remove the two Phillips screws attaching the right side panel to the metal chassis.




4. Using needlenose pliers, squeeze the plastic tabs (protruding through the chassis), to release the right side panel from the metal chassis.

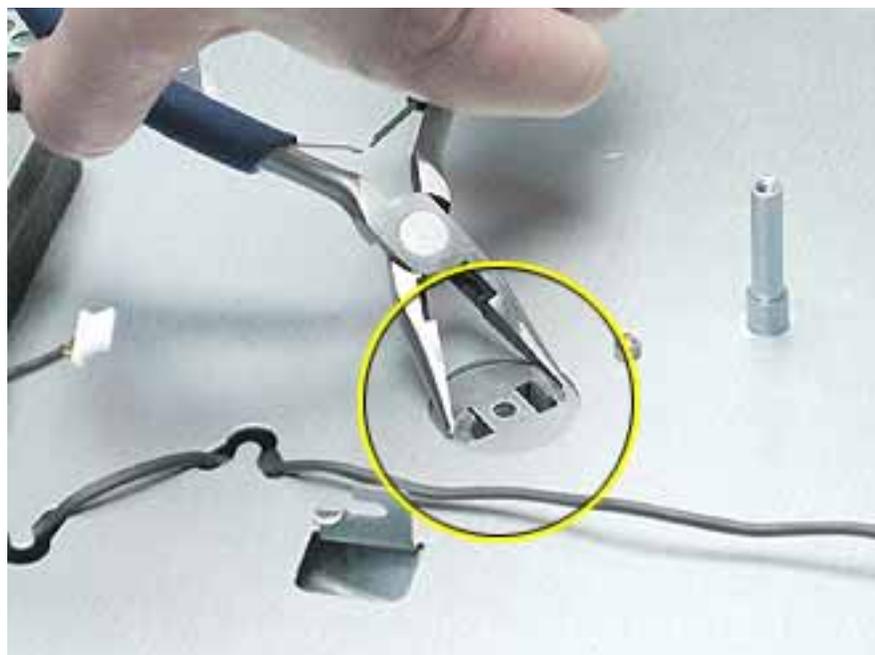

5. Remove the right side panel from the chassis.



Replacement Note: When installing the replacement right side access panel, make sure the latch is closed, and the metal latch spring pin inside the chassis fits under the plastic latch tab, as shown.

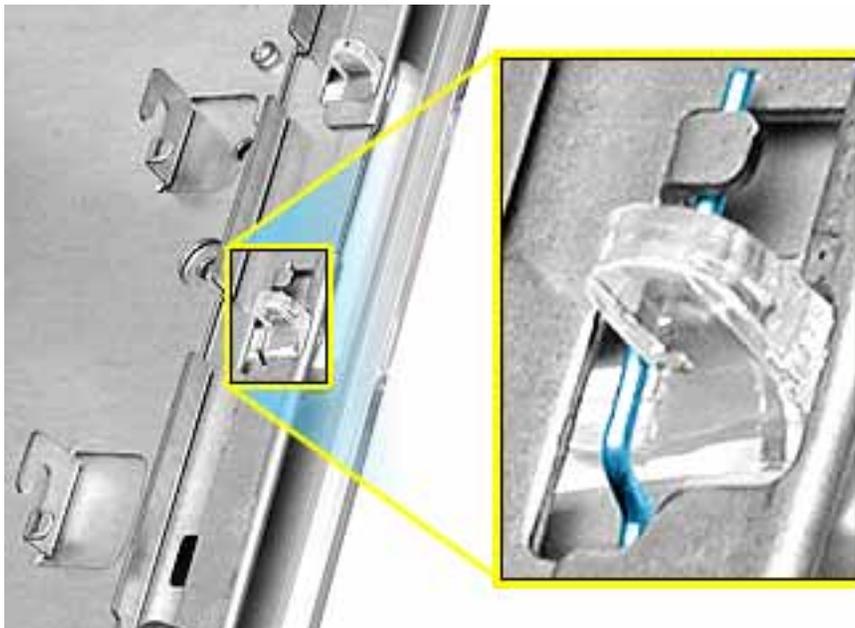




Modem Filter Board

Tools

The only tool required for this procedure is a Phillips screwdriver.

Part Location

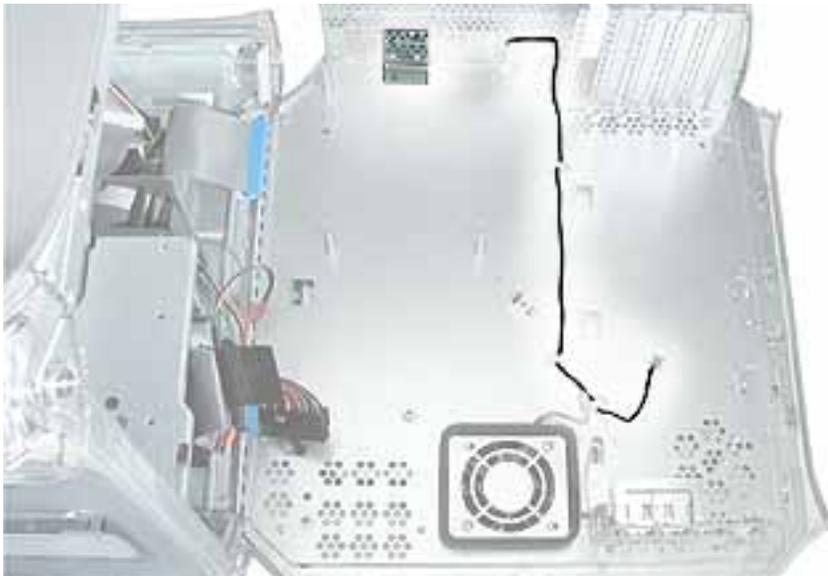

Preliminary Steps

Before you begin, open the computer and remove the following.

- DIMMs
- Video card
- SCSI card (if present)
- Modem (if present)
- AirPort Card (if present)
- Heatsink
- Processor
- Processor stiffener
- Logic board

Procedure

1. Remove the mounting screw that secures the modem filter board to the back chassis.
2. Free the modem filter board cable from the guides in the chassis.



3. Swing the modem filter board out of the opening in the back chassis.

Replacement Note: Install the two tiny tabs on the replacement modem filter board into the tiny slots on the back chassis. Then swing the board into place before securing the screw.





Troubleshooting
Power Mac G4 (Mirrored Drive Doors)



General Information

What's New

Available Configurations

Configuration	Good	Better	Best
Bus Speed	133 MHz	167 MHz	167 MHz
L3 cache	1 MB per processor	1 MB per processor	2 MB per processor
Memory	256 MB, DDR 266 MHz	256 MB, DDR 333 MHz	512 MB, DDR 333 MHz
Processor	Dual 867 MHz Power PC G4	Dual 1 GHz Power PC G4	Dual 1.25 GHz Power PC G4
Optical Drive	Combination (DVD-ROM/CD- RW)	SuperDrive (DVD-R/CD-RW)	SuperDrive (DVD-R/CD-RW)

Cable-Select Drives

Important: This computer works with ATA and ATAPI internal storage devices that are set for cable select mode. The cable select feature forces the device to set its ID as either master or slave based upon its position on the ATA/ATAPI cable. If the device is attached to the end of the cable, then the device identifies itself as a master. If the device is at the middle cable position, then it is a slave. Because cable select mode forces the drive to set its ID based upon its position on the cable, hard drives and optical drives are easily configured. Before you install an additional third-party ATA and ATAPI drive, check the documentation that came with the drive or with the manufacturer to make sure it is set for cable select mode.

Important: Use the original Apple cables that came with this computer when you install additional drives. Some non-Apple cables may not correctly support cable select mode.

DDR Memory

The computer's logic board includes four memory slots, which accept double-data rate (DDR) SDRAM DIMMs. Memory can be expanded to a maximum of 2 gigabytes.

DIMMs used in this computer must fit these specifications:

- PC2100 SDRAM DDR266 DIMMs for 133 MHz systems
- PC2700 SDRAM DDR333 DIMMs for 167 MHz systems

Important: Make sure that the memory installed on the logic board is compatible with the system. If PC2100 (DDR266) memory is put into a system with a 167 MHz logic board, the system will not boot. A single tone will sound instead of the boot chime, and the front LED will flash. And if PC2700 (DDR333) memory is put into a system with a 133 MHz logic board, the system will behave as though DDR266 DIMMs were installed.

- 128, 256, or 512 MB DIMMs

256 MB DIMMs must have 128 or 256 megabit (Mbit) technology devices; 512 MB DIMMs must have 256 Mbit devices

- 2.5 volt
- 64-bit wide, 184-pin module
- unbuffered (do not use registered or buffered DRAM)
- maximum height of 1.3 inches

Important: DIMMs from older Macintosh computers are not compatible with this computer. Do not use older DIMMs even if they fit into the DIMM slots.

Ports

The standard configuration includes the following ports on the back panel: one Ethernet port, two FireWire ports, two USB ports, an internal modem port (on some models), Apple speaker mini-jack, an audio line-in port, an audio line-out port, a security lock port, a DVI monitor port, and an ADC monitor port. There is also one headphone jack on the front of the computer.

The computer can be used with DVI or ADC monitors. To connect the computer to a VGA monitor, use the DVI-to-VGA adapter that came with the computer.

Note: For a diagram of the ports location, see “External Views” in the Views chapter.

PCI and AGP Cards

The AGP 4X card, installed in slot 1, contains the graphics processor unit (GPU) and provides the monitor ports. Slot 1 is designed specifically to accept AGP cards. This 66 MHz slot accommodates 1.5 V AGP cards.

The standard configuration of the computer has four PCI expansion slots, labeled 2, 3, 4, and 5, which accept PCI cards up to 12 inches long. Some models come with a SCSI PCI

card installed in one of these slots. The PCI slots can accommodate mixed voltage (5.0 V, 12 V, or 3.3 V) cards with 32-bit or 64-bit data widths and a 33 MHz frequency. A 66-MHz card can be used in a PCI slot if the card can operate at the lower 33 MHz rate.

Note: Maximum power consumption by the cards is

- 30 W for the AGP card
- 60 W for four PCI cards

Warning: Cables with large connectors may interfere with the enclosure in the PCI slot numbered 5, making it difficult to close the door and potentially causing damage to the PCI card. If this is the case, rearrange the cards in the slots. You may also connect the cable after the enclosure door is shut, but be sure to remove the cable before opening the door again. If the PCI cards are connected to each other with cables or jumpers, be careful when closing the door.

Ventilation

Warning: To prevent the computer from overheating, do not block the ventilation openings in the back panel.

Hard Drives

In this computer, the thickness of the hard drives must not exceed one inch (2.5 cm).


The computer can accommodate two internal Ultra ATA hard drives in each hard drive carrier, for a total of four drives. If the computer has one Ultra ATA drive installed, it sits in the rear drive carrier. A second drive can be installed in the rear carrier and two additional drives in the front carrier.

Warning: Do not swap ATA cable locations. The hard drive cables must not be swapped between hard drive carrier locations:

- 100 MHz ATA bus speed cable at rear carrier
- 66 MHz ATA bus speed cable at front carrier

Note: Before installing a third-party drive, check with the drive manufacturer or the manufacturer's Web site to determine if the drive is set for cable select mode. Before installation, set the drive to cable select if the manufacturer has not done so.

Block Diagram

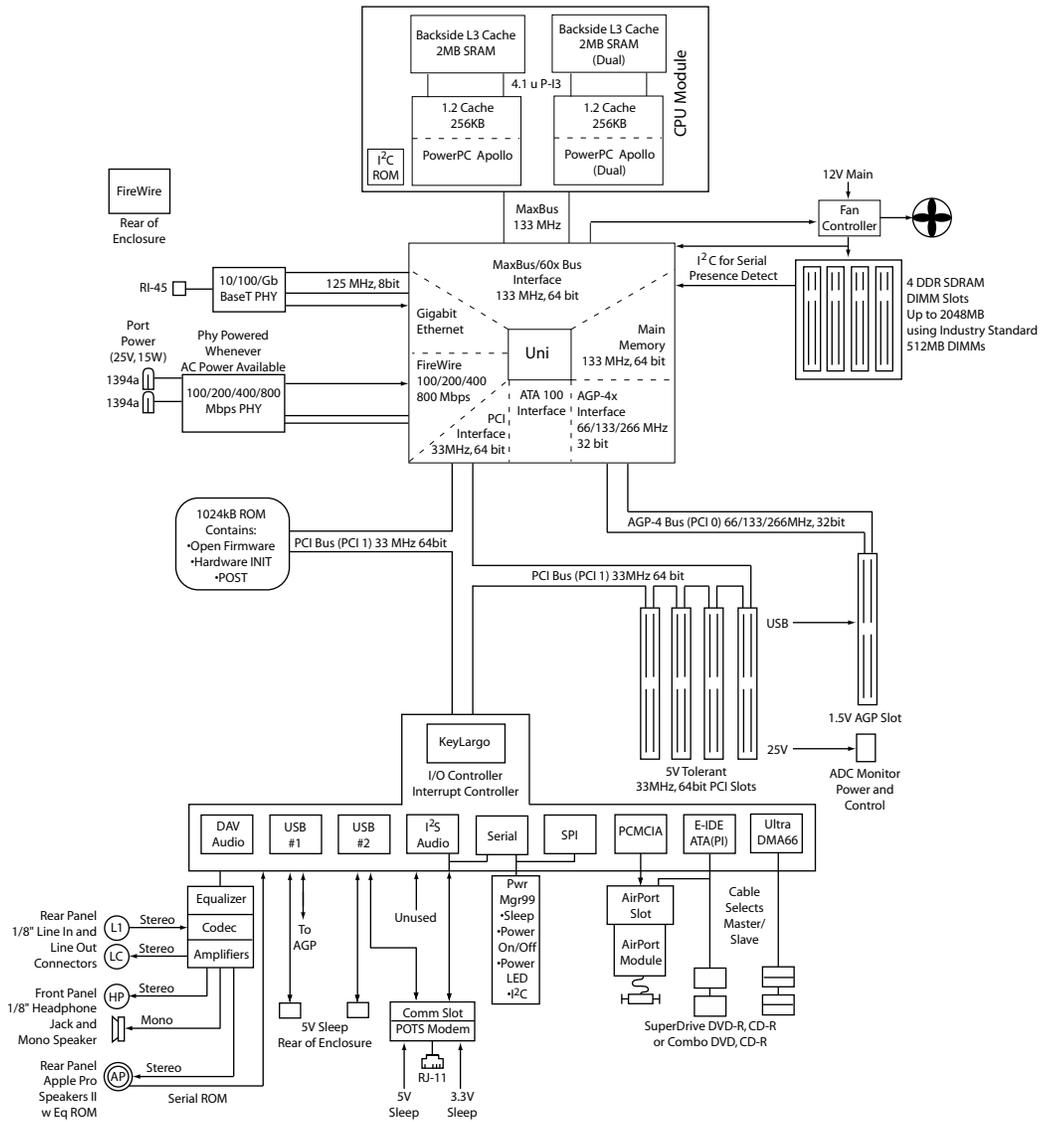

Resetting the PMU on the Logic Board

The PMU (Power Management Unit) is a microcontroller chip that controls all power functions for this computer. The PMU is a computer within a computer. Its function is to:

- tell the computer to turn on, turn off, sleep, wake, idle, etc.
- manage system resets from various commands.
- maintain parameter RAM (PRAM).
- manage the real-time clock.

Important: Be very careful when handling the logic board. The PMU is very sensitive and touching the circuitry on the logic board can cause the PMU to crash. If the PMU crashes and is not reset, the battery life goes from about five years to about two days.

Note: For the location of the PMU reset button, see “Logic Board Diagram” in the Views chapter.

Many system problems can be resolved by resetting the PMU chip. When you have a computer that fails to power up, follow this procedure before replacing any modules:

1. Disconnect the power cord and check the battery in the battery holder. The battery should read 3.3 to 3.7 volts. If the battery is bad, replace it, wait ten seconds, and then proceed to step 2. If the battery is good, go directly to step 2.
2. Press the PMU reset button once and then proceed to step 3. Do not press the PMU reset button a second time because it could crash the PMU chip.
3. Wait ten seconds before connecting the power cord and powering on the computer. If the computer does not power on, there is something else wrong with it; refer to the “System” section of “Symptom Charts” in this chapter.

Note: The above procedure resets the computer’s PRAM. After resetting the PMU, be sure to reset the time, date, and other system parameter settings.

Power Supply Verification

To power on, the computer's logic board requires a "trickle" power of +5V. If the system fails to power on, first reset the PMU. Then follow the procedure outlined below to determine whether the problem is related to the power supply.

Note: To verify the power supply, you need a volt meter. When connecting the volt meter leads to specific pins, make sure the power supply remains securely plugged into its connector on the logic board.

The following figure shows the pins and voltage on the computer's power supply connector. (The color noted represents the color of the wire attached to the pin.)

Black GND Pin 12	□ □	Pin 24 +12V Yellow
Green Power On Pin 11	□ □	Pin 23 GND Black
Yellow +12V Pin 10	□ □	Pin 22 +12V Yellow
Black GND Pin 9	□ □	Pin 21 +12V Yellow
Blue -12V Pin 8	□ □	Pin 20 GND Black
Black GND Pin 7	□ □	Pin 19 +3.3V Orange
Orange +3.3V Pin 6	□ □	Pin 18 +3.3V Orange
Black GND Pin 5	□ □	Pin 17 +3.3V Orange
Red +5V Pin 4	□ □	Pin 16 GND Black
Red +5V Pin 3	□ □	Pin 15 +5V Red
Black GND Pin 2	□ □	Pin 14 +25V Standby White
Purple +5V TRKL Standby Pin 1	□ □	Pin 13 GND Black

1. Plug a known-good power cord into the computer. Do not turn on the computer.
2. Connect the black lead of the volt meter to pin 12 of the power supply connector; connect the red lead of the volt meter to pin 24. The volt meter should measure approximately +12V.

If you do not get a reading of +12V, recheck the volt meter connections and measure the voltage again. If voltage is still not present, replace the power supply.

If you do measure +12V on pin 24, the power supply is likely OK. Go to the next step for further verification.

3. Start up the computer by pressing the power button on the front panel.

If the computer starts up normally, the power supply is OK. If the computer does not start up, go to the next step.

-
4. Check to see if the power supply fan is spinning.
If the fan spins, the power supply is OK. If the fan does not spin, go to the next step.
 5. Connect the black lead of the volt meter to pin 12 of the power supply connector; connect the red lead to pin 6. The volt meter should measure approximately +3.3V.
If you do not get a reading of +3.3V, recheck the volt meter connections and measure the voltage again. If voltage is still not present, replace the power supply.
If you do measure +3.3V on pin 6, the power supply is likely OK. Go to the next step for further verification.
 6. Connect the black lead of the volt meter to pin 12 of the power supply connector; connect the red lead to pin 3. The volt meter should measure approximately +5V.
If you do not get a reading of +5V, recheck the volt meter connections and measure the voltage again. If voltage is still not present, replace the power supply.
If you do measure +5V on pin 3, the power supply is likely OK. Go to the next step for further verification.
 7. Connect the black lead of the volt meter to pin 12 of the power supply connector; connect the red lead to pin 10. The volt meter should measure approximately +12V.
If you do not get a reading of +12V, recheck the volt meter connections and measure the voltage again. If voltage is still not present, replace the power supply.
If you do measure +12V on pin 10, the power supply is OK and the testing is complete. You have verified that the power supply is not the cause of the “no apparent power” symptom.

RAM and Processor Verification: Power-On Self Test

A power-on self test in the computer’s ROM automatically runs whenever the computer is started up after being fully shut down (the test does not run if the computer is only restarted). If the test detects a problem, you will not hear a normal startup chime. Instead, the system will beep as explained below:

- **1 beep:** No RAM is installed or detected.
- **2 beeps:** Incompatible RAM types are installed.
- **3 beeps:** No RAM banks passed memory testing.
- **4 beeps:** No good boot images are detected in the boot ROM (and/or there is a bad sys config block).
- **5 beeps:** The processor is not usable.



Symptom Charts

How to Use the Symptom Charts

The Symptom Charts included in this chapter will help you diagnose specific symptoms related to the product. Because cures are listed on the charts in the order of most likely solution, try the cures in the order presented. Verify whether or not the product continues to exhibit the symptom. If the symptom persists, try the next cure.

Note: If a cure instructs you to replace a module, reinstall the original module before you proceed to the next cure.

Important: The only way to shut off power completely to the computer and display is to disconnect their power plugs from the power source. Make sure the power cords to the computer and display are within easy reach.

Startup

System is completely dead (no fan movement and power LED is not lit)

1. Verify the power outlet is good.
2. Replace the power cord.
3. Make sure the voltage switch on the back of the power supply is set to the correct voltage.
4. Reset the logic board. Refer to “Resetting the PMU on the Logic Board” in this chapter.
5. Check for trickle voltage on the power supply connector. Refer to “Power Supply Verification” in this chapter. If verification fails, replace the power supply.
6. Disconnect external devices, including the monitor, and start up the computer.
7. Remove internal cards and start up the computer.
8. Disconnect internal hard drives from the logic board and start up the computer.
9. Check the modem connector. If the connector has any bent pins, replace the logic board.
10. Replace the logic board.

Memory error message appears on the screen

1. Reseat the DIMMs.
2. Verify that only the correct SDRAM DIMMs are installed.
3. Replace the DIMMs one at a time and test until all bad DIMMs are replaced with known-good modules.

Flashing question mark appears on the screen

1. Start up from the system restore CD and check to see if the hard drive shows up in the Disk Utility. If it does, go to step 2. If it does not, go to step 4.
2. Run Disk Utility. Update the driver and restart the computer.
3. Reinstall system software using the system restore CD that came with the computer.
4. If you are starting up in Mac OS 9, turn off your Mac OS 9 system extensions:
 - Start up the computer while holding down the Shift key.
 - If the computer is set to start up from another computer on your network, check that the Ethernet cables are firmly connected, then restart the computer. If the computer has trouble connecting to the network, check that the startup computer or server is not down.
 - If in Mac OS 9, remove any items from the Servers folder in the System Folder.

If that does not work, or if you are starting up in Mac OS X, turn off the computer by holding down the power button. Then start up using the Software Install CD.

- Insert the system software CD and start up while holding down the C key. (Make sure the Caps Lock key is not engaged.)
 - After the computer starts up, see the troubleshooting information in the onscreen help. Choose Mac Help from the Help menu. Look at the section on how to prevent and solve problems. You may need to check for extension conflicts or reinstall the computer's system software.
5. Reseat the hard drive data and power cables.
 6. Replace the hard drive.

Computer begins to power up, the fan and hard drive are spinning, the power LED is lit, but there is no startup chime or video

1. Reset the logic board. Refer to "Resetting the PMU on the Logic Board" in this chapter.
2. Verify all PCI and AGP cards are seated properly.
3. Reseat the processor module.
4. Replace the processor module.
5. Replace the logic board.

No image on screen

1. Make sure the display and computer are turned on.
2. Make sure the cables are connected properly to the computer and display.
3. If an ADC display is connected, check the ADC connectors on the video card and the cable for physical damage. If the video card connector looks fine, test for the symptom with a known-good display.
4. Make sure the computer is not in sleep. Press the power button or any key to see if the computer wakes.
5. Make sure the display brightness and contrast are set properly.
6. Reset the PRAM by restarting the computer while holding down the Command, Option, P, and R keys until you hear the startup sound a second time. Then start up using the Software Install CD.

System shuts down intermittently

1. Make sure the power cord is plugged in firmly.
2. Check the Energy Saver settings.
3. Check that the power source is turned on and the correct voltage is present.
4. Replace the power cord.
5. Make sure the air vents are clear.
6. Check that the fan cables are connected and the fans are operational.
7. Check that the heatsink is properly attached to the processor.
8. Reset the logic board. Refer to "Resetting the PMU on the Logic Board" in this chapter.
9. Replace the power supply.
10. Replace the logic board.

System shuts down almost immediately after startup

1. Reset the logic board. Refer to "Resetting the PMU on the Logic Board" in this chapter.
2. Disconnect the power cables to all hard drives and optical drives. Remove all cards and test power sequentially to troubleshoot cards and drives.
3. Check the modem connector. If the connector has any bent pins, replace the logic board.
4. Replace the processor module.
5. Replace the power supply.
6. Replace the logic board.

System shuts down when using multiple FireWire devices and an Apple ADC 17" CRT display is connected

The power requirements for multiple FireWire devices and the Apple ADC 17" CRT display may exceed the capacity of the power supply, causing it to shut the system down. To alleviate this problem, do the following:

1. Reduce the number of bus-powered FireWire devices
2. Use a power adapter with all FireWire devices
3. Reduce monitor power draw by reducing brightness or reducing the amount of white space (open text documents, for example).

System quits or stops responding intermittently

1. If the system quits or stops responding in a specific application, force the application that has frozen to quit:
 - In Mac OS X, choose Force Quit from the Apple menu and select the application.
 - In Mac OS 9, hold down the Esc, Option and Command keys and click Force Quit in the dialog box.

Replace the application. Verify the application is compatible with the operating system.

2. For a suspected software problem,
 - Use Software Update to ensure that the computer has the latest drivers, bug fixes, and other updates.
 - For problems with software from a manufacturer other than Apple, contact the manufacturer.
3. Clear parameter RAM. Hold down Command-Option-P-R during startup until you hear a second startup chime.
4. Perform a clean install of system software with the system restore CD that came with the computer.
5. Run Disk Utility.
6. Replace the DIMMs one at a time and test until all bad DIMMs are replaced with known-good modules.
7. Reset the logic board. Refer to "Resetting the PMU on the Logic Board" in this chapter.
8. Replace the processor module.
9. Replace the logic board.

Error Tones

Note: Error tones occur before system software loads.

Computer beeps once at startup

One beep means that no RAM is installed or detected.

1. If no DIMM is present, install a known-good DIMM in the top slot and try again.
2. Reseat the DIMMs.
3. Replace the DIMMs one at a time and test until all bad DIMMs are replaced with known-good modules.
4. Check that the processor module is properly installed.
5. Replace the processor module.
6. Replace the logic board.

Computer beeps two times at startup

Two beeps mean that incompatible RAM types may be installed. Verify that only DDR266 SDRAM DIMMs are installed.

1. Replace the DIMMs one at a time and test until all bad DIMMs are replaced with known-good modules.
2. Check that the processor module is properly installed.
3. Replace the processor module.
4. Replace the logic board.

Computer beeps three times at startup

Three beeps mean that no RAM banks passed memory testing.

1. Replace the DIMMs one at a time and test until all bad DIMMs are replaced with known-good modules.
2. Check that the processor module is properly installed.
3. Replace the processor module.
4. Replace the logic board.

Computer beeps four or five times at startup

Four or five beeps mean that the ROM is probably bad and cannot be fixed.

1. Replace the processor module.
2. Replace the logic board.

Video

Screen is black, but startup chime is present, drive operates, fan is running, and power LED is lit

1. Check video cable/card connections and connector pins.
2. Test with a known-good monitor. Replace the monitor, if necessary.
3. Remove all third-party devices.
4. Reseat the video card.
5. Clear parameter RAM. Hold down Command-Option-P-R during startup until you hear a second startup chime.
6. Reset the logic board. Refer to “Resetting the PMU on the Logic Board” in this chapter.
7. Replace the video card.
8. Replace the logic board.

Screen is black, there is no startup chime, and drive does not operate, but fan is running and power LED is lit

1. Check video cable/card connections and connector pins.
2. Reset the logic board:
3. Refer to “Resetting the PMU on the Logic Board” in this chapter.
4. Reseat the video card.
5. Reseat the processor module.
6. Replace the processor module.
7. Replace the logic board.

Startup chime is present but screen is gray

1. Reset the logic board. Refer to “Resetting the PMU on the Logic Board” in this chapter.
2. Reseat all PCI cards.
3. Reseat all DIMMs.
4. Test with known-good DIMMs.
5. If using more than one display, make sure primary display is connected to video card.
6. Reseat the processor module.
7. Replace the processor module.
8. Replace the logic board.

Video is distorted

1. Make sure that the video card driver and firmware are updated to the most recent versions.
2. Refer to the adjustments section of the service manual or owner's manual for the monitor. Adjust monitor as necessary.
3. Third-party monitors: Try a known-good monitor.
4. Reseat the video cable.
5. Reseat the video card.
6. Check the video adapter, if present.
7. Replace the video card.

Screen jitters

1. Verify there are no environmental factors causing jitter.
Note: The jitter may be caused by interference from a nearby power line, a fluorescent light, or an external device—for example, a radio, microwave oven, or another computer. Try relocating nearby electrical devices or moving the computer and display.
2. Check all cable connections.
3. Make sure that the video card driver and firmware are updated to the most recent versions.
4. Test with a known-good monitor. Refer to the appropriate monitor manual to troubleshoot a defective monitor. Replace the monitor, if necessary.
5. Reseat the video card.
6. Replace the video card.
7. Replace the logic board.

Sound

No sound from computer's internal speaker

1. Disconnect any microphones or external speakers.
2. Verify the volume is set appropriately in the Sound system preference or Sound control panel and mute is not checked.
3. Clear parameter RAM. Hold down Command-Option-P-R during startup until you hear a second startup chime.
4. Verify the speaker cable is plugged into the logic board.
5. Plug headphones or external speakers into the external jack. If the external jack works, replace the internal speaker. If the external jack doesn't work, replace the logic board.

No sound from Apple Pro Speakers

1. Push on the Apple Pro Speaker jack to make sure it is firmly inserted into the Apple Speaker sound output port. (The Apple Pro Speaker jack has two detents. You should feel them as you push the jack into the sound output port. Giving the jack a slight twist while inserting it into the port may make a better connection.)
2. Verify the speaker volume and balance are set appropriately in the Sound system preference or Sound control panel and mute is not checked.
3. Clear parameter RAM. Hold down Command-Option-P-R during startup until you hear a second startup chime.
4. Reinstall system software.
5. Replace the Apple Pro Speakers.
6. Replace logic board.

Hard Drive

Single internal ATA drive does not spin; flashing question mark on screen

1. Check all cable connections to the hard drive.
2. Try another power connector on the power cable harness. If the power cable is defective, replace the power supply.
3. Replace the hard drive. If the problem is resolved, make sure the driver and system software are updated to the most recent versions.

No internal SCSI drive icon appears on the desktop

1. Check that the drive is listed in Apple System Profiler. If it is, go to step 2. If it is not, go to step 5.
2. Update the drivers.
3. Verify there are no duplicate SCSI device addresses on a single SCSI bus.
4. Disconnect external SCSI devices and check for proper termination.
5. Reseat the SCSI PCI card and verify the cable is seated firmly in the card and drives.
6. Check internal SCSI termination. Internal drives should not be terminated; the SCSI cable should have termination at the end.
7. If more than one SCSI device is on the SCSI chain, remove one device at a time and retest. Replace the bad drive.
8. Replace the internal SCSI data cable.
9. Replace the SCSI PCI card.
10. Verify SCSI drive power by testing different power connector or using a volt meter to check for 12 V/5 V.

No external SCSI drive icon appears on the desktop

1. Verify there are no duplicate SCSI device addresses.
2. Verify the total cable length does not exceed the maximum total cable length for the SCSI card. See Knowledge Base article 58204.
3. Reseat the SCSI cable going to the SCSI card.
4. Replace the terminator on the external SCSI device.
5. Reseat the SCSI card.
6. Replace the SCSI card.
7. Replace the SCSI drive cables one at a time.
8. Disconnect the external SCSI chain. Using known-good cables, reattach devices one at a time.

Optical Drive

Optical drive tray won't open

1. Reseat the drive data and power cables on the back of the optical drive.
2. Verify the optical drive bezel is properly seated.
3. Reseat the drive data cable on the logic board.
4. Try using a known-good disc.
5. Replace the optical drive.

Unable to eject disc

1. Quit open applications and try to eject disc again.
2. In Mac OS X, choose Restart from the Apple menu and hold down either the mouse button or the Media Eject key on your Apple Pro Keyboard.

In Mac OS 9, choose Restart from the Special menu and hold down either the mouse button or the Media Eject key on your Apple Pro Keyboard.
3. Manually eject the disc, as follows:
 - Shut down the computer.
 - Open the front panel covering the front of the drive tray and locate a small hole below the drive tray.
 - Carefully insert the end of a large straightened paper clip into the hole.
 - Push firmly until the tray opens.
 - Pull out the tray, remove the disc, and push the tray to close it.
4. If using a third-party keyboard, hold down F12 key.

Optical drive icon does not appear on the desktop

1. Check to see if the optical drive is listed in Apple System Profiler. If it is, go to step 2. If it is not, go to step 7.
2. Try using a known-good disc.
3. If there is a disc stuck in the tray, refer to the symptom "Unable to eject disc".
4. Turn off all third-party extensions.
5. Verify the firmware is the most recent version for that drive. Check Software Downloads for any current update.
6. Reinstall system software.
7. Reseat the drive data and power cables on the back of the optical drive.
8. Try another connector on the power cable harness. If there is a bad connector on the harness, replace the power supply.
9. Replace the optical drive.

-
10. Replace the logic board only if other devices on the bus do not work.

USB Devices

At startup, cursor does not move with the Apple mouse

1. Verify that mouse and keyboard connections are secure.
2. If the mouse is connected to the keyboard, connect the mouse to one of the USB ports on the I/O panel instead. If the mouse works, replace the keyboard.
3. Start up from the system installation CD or system restore CD that came with the computer. If the mouse operates, troubleshoot software; refer to the symptom "System quits or stops responding intermittently".
4. If the mouse is connected to one of the USB ports on the I/O panel, switch to the other USB port. If the mouse operates correctly, the first port was bad. Replace the logic board. **Note:** You can also use Apple System Profiler to verify USB ports.
5. Replace the mouse.

No response to any key on keyboard

1. Verify that keyboard and mouse connections are secure.
2. Remove all USB devices, except the keyboard and mouse. If the keyboard operates correctly, troubleshoot the other USB devices.
3. Switch the keyboard to a different USB port. If the keyboard operates correctly, the first port was bad. Replace the logic board. **Note:** You can also use Apple System Profiler to verify USB ports.
4. Relaunch Finder.
5. Start up from the system installation CD or system restore CD that came with the computer. If the keyboard operates, reinstall system software.
6. Replace the keyboard.
7. Replace the logic board.

USB printer does not operate

1. Verify that connections to the printer and computer are secure.
2. Switch the printer to a different USB port. If the printer operates correctly, the first port was bad. Replace the logic board. **Note:** You can also use Apple System Profiler to verify USB ports.
3. Verify the correct versions of the system software and printer driver are installed.
4. Use Print Center to verify that you have the correct printer selected.

-
5. If the printer is connected to a third-party USB hub, switch it to one of the USB ports on the I/O panel. If the printer operates, the hub is bad.
 6. De-install and then re-install the print driver.
 7. Replace the printer interface cable.
 8. Replace the printer.
 9. Replace the logic board.

FireWire Devices

No external FireWire device icon appears on the desktop

1. Verify that the FireWire device is turned on and the FireWire cable is securely connected to the device and the computer.
2. If the device requires external power, make sure it is plugged in.
3. Check that the FireWire device is listed in Apple System Profiler. If it is, go to step 4. If it is not, go to step 5.
4. Check the FireWire device documentation to see if additional drivers are required. If so, make sure the drivers are installed.
5. Check for broken pins, dust, dirt, or wear on both FireWire cable connectors, the device FireWire port, and the computer FireWire port.
6. Reconnect the FireWire device to another FireWire port on the computer. If the computer has a bad FireWire port, replace the logic board.
7. Replace the FireWire cable.
8. Replace the FireWire device.
9. Replace the logic board.

Network Problems

Unable to see any network devices or connection drops off line by itself

1. Try a known-good Ethernet cable.
2. Open the Network system preference and select the Ethernet option. Verify that you can now see devices on the network.
3. Clear parameter RAM. Hold down Command-Option-P-R during startup until you hear a second startup chime.
4. Start up from the system installation CD or system restore CD that came with the computer. Open the Network system preference and select the Ethernet option. Are you able to switch to Ethernet and see Ethernet devices on the network? If so, reinstall system software.

-
5. Try connecting to a known-good Ethernet port at the wall or external hub.
 6. Verify that other users are experiencing the same problem. If so, contact the network administrator.
 7. If connected to an Ethernet card, reseal the card.
 8. If connected to an Ethernet card, replace the card.
 9. Replace the logic board.

Modem

The internal modem is not recognized

1. Make sure the correct CCL and extension files are installed.
2. Reseat the modem and modem cable.
3. Reinstall the CCL and modem extension. If the problem persists, reinstall the system software.
4. Clear parameter RAM. Hold down Command-Option-P-R during startup until you hear a second startup chime.
5. Replace the modem.

System reports a No Dial Tone error message

1. Verify the modem phone cable is securely connected at the computer and the wall jack.
2. Verify the phone line is operational.
3. Replace the modem phone cable.
4. Reseat the modem and internal modem cables.
5. Replace the modem.

There is a dial tone, but the modem cannot dial out

1. International only: Use the Modem Country Selector utility to make sure the modem is set to the correct country.
2. Open the Modem system preference or control panel and verify that the correct modem type is selected, the sound is On, and the dialing is set to Tone. At this point, leave the Ignore Dial Tone setting unselected.
3. Make sure the correct driver is installed and the correct CCL is selected and that they are not corrupted. If necessary, reinstall the driver and/or CCL.
4. Try another cable and phone jack.
5. Verify the modem settings with the internet service provider (ISP).

-
6. Open the Modem system preference or control panel and select Ignore Dial Tone. (Note: Some voice mail systems use a beeping dial tone to notify users of waiting messages, which can affect the modem connection.)
 7. If the problem persists, reinstall the system and modem software.

Modem is having trouble connecting to online site

1. International only: Use the Modem Country Selector utility to make sure the modem is set to the correct country.
2. The phone line may have too much noise. If the user has a second line, try that one. The user should contact the local phone company and request the line be checked.
3. Check to make sure the TCP/IP system preference or control panel is correctly configured for the user's internet service provider. If it is not configured correctly, the modem may connect but won't be able to access any sites.
4. Sometimes internet service providers use different servers for dial-up/authentication and for services. If one server is down, users may be able to log in but not access any services. Contact the internet service provider for help.

Modem cannot connect to remote access server or to ISP

1. Verify the phone number of the server. Dial the number using a telephone and listen for the "whistle" of a modem.
2. Make sure the user has set up remote access for the server being contacted.
3. The user may need to create pauses while the number is being dialed. Insert a comma between parts of the number where a pause might be needed. For example, the following entries cause remote access to dial "9" to get an outside line and then pause before dialing the rest of the number: 9, 555-1234

Modem is dropping its connection

1. International only: Use the Modem Country Selector utility to make sure the modem is set to the correct country.
2. Try another cable and phone jack.
3. The phone line may be too noisy to handle the higher modem speeds. Try connecting at a slower speed or use a generic CCL file. (If you are familiar with the CCL script language, you can edit the modem script to force a connection at a lower speed.) If the problem continues, contact the phone company to report the bad phone line.
4. Check if the user has call waiting on that phone line. With call waiting active, an incoming call can interrupt the connection. Disable call waiting using AT commands placed in the init string of the dialup application. Usually the string is *70.
5. There may be a problem with the server the user is connecting to. Servers sometimes develop problems that disconnect users without explanation. Try calling back later or

use an alternate number if one is available. If the problem persists, contact the internet service provider.

6. Reseat the modem and internal modem cables.
7. Replace the modem.

Modem disconnects after a period of time


A timed disconnect setting is causing the modem to disconnect. Some internet service providers or software packages have a feature that will disconnect the user after a set period of time. Either increase this time setting or disable the feature if possible. Contact the internet service provider or network administrator for more information.

User does not receive a required callback from a server

1. Contact the network administrator to verify the callback number is correct.
2. Verify the user has the correct modem script.

Modem is slow responding

1. Too many people are using the internet services. Users need to remember that the internet service provider has only a limited amount of bandwidth to the internet. If many people are dialing in, the individual's connect speed will be affected.
2. Check the phone line. The quality of the phone line can limit modem performance.

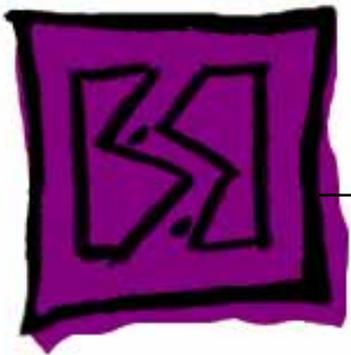


Views

Power Mac G4 (Mirrored Drive Doors)

Exploded View


COVERS

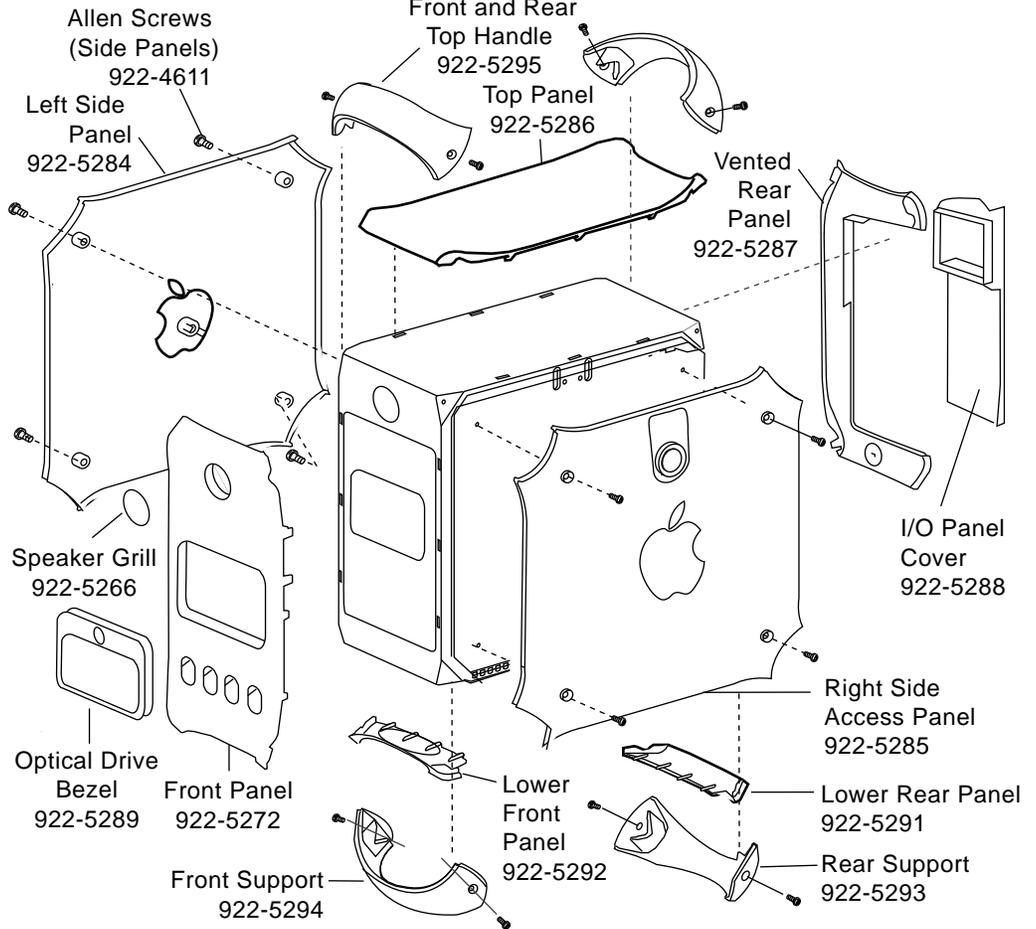


Enclosure with Chassis 922-4543



Logic Board Diagram

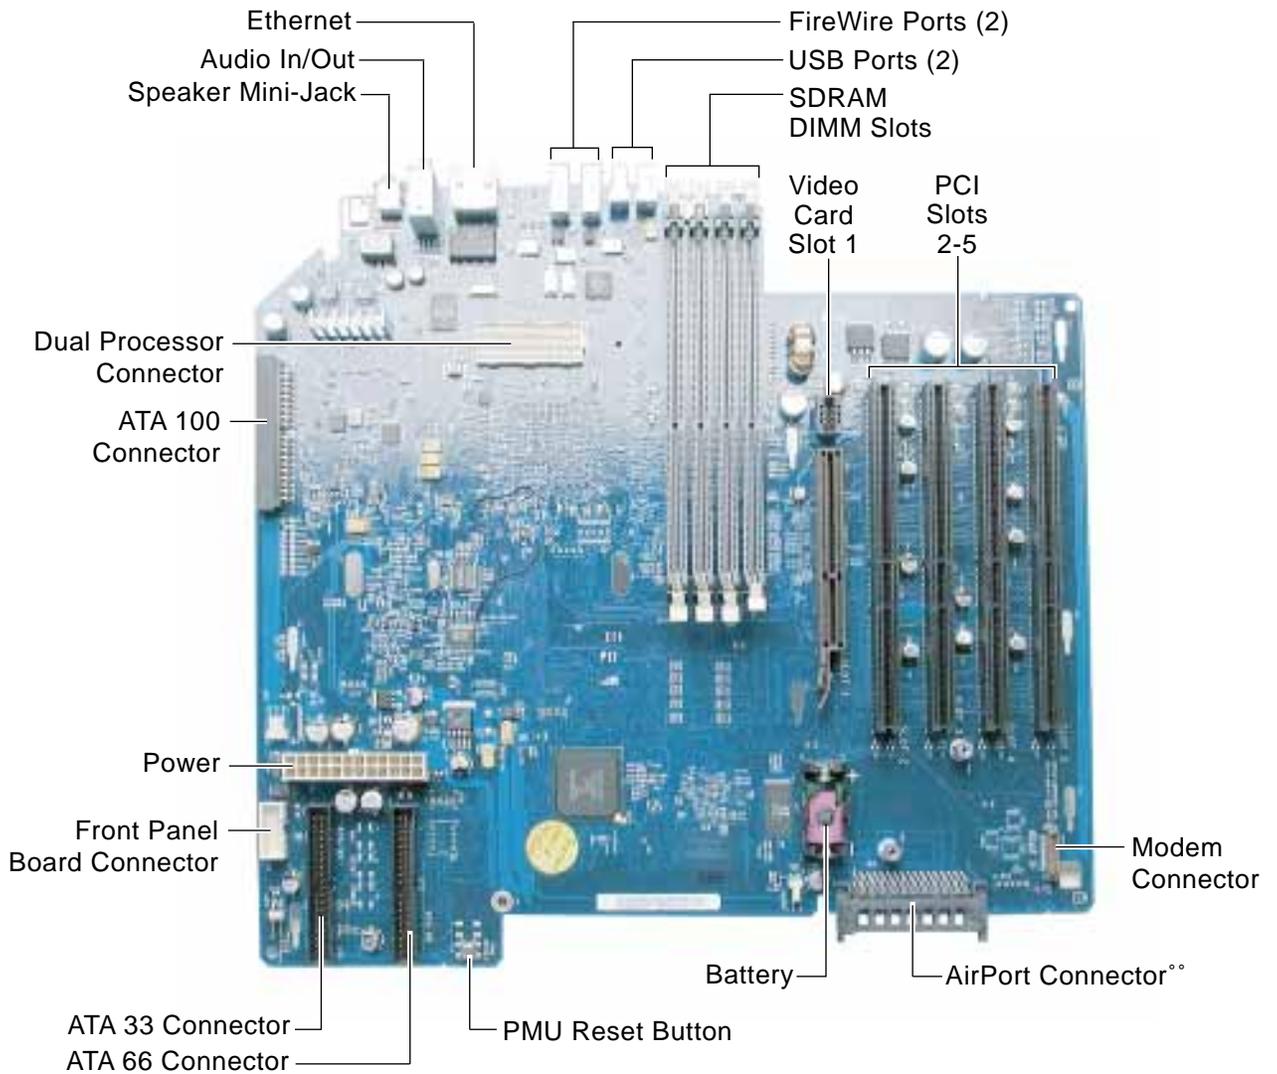

Front View

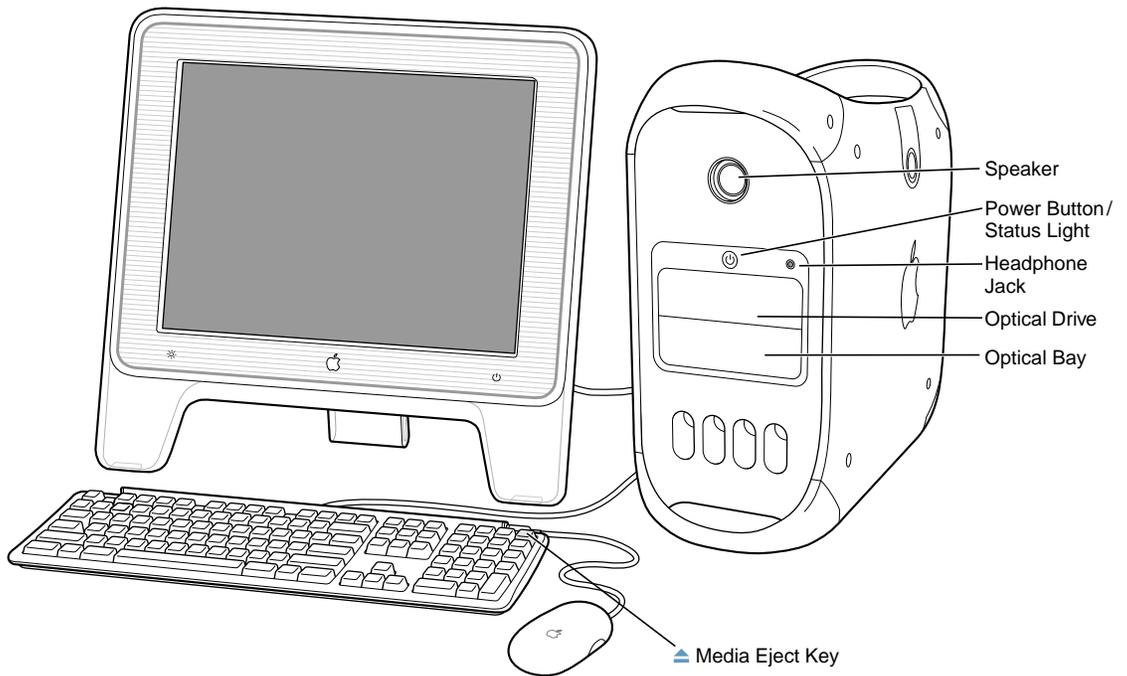

Back View

